 


ProMa

User Manual

Getting to know the ProMa King Tablet

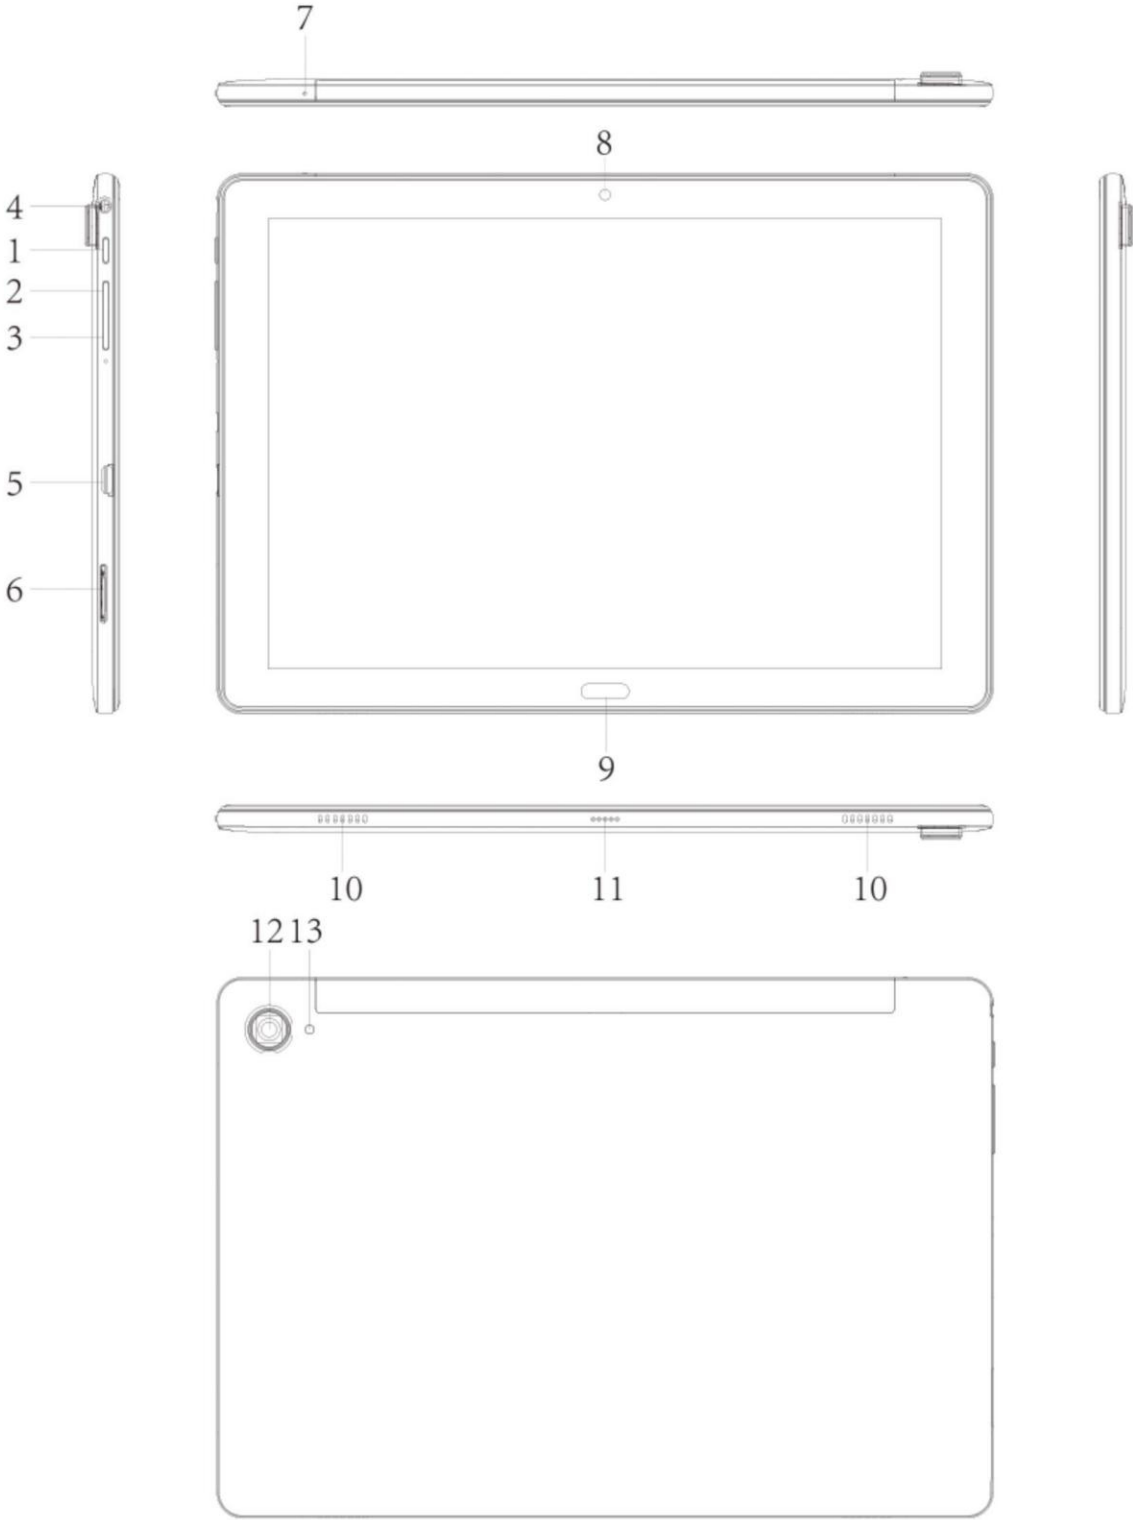

At a Glance

1. Power Button: Press and hold the power button for 3 seconds to start up; Press it down to start or close the touch panel; Long press for 8 seconds to reset.
2. Volume + : Volume Up
3. Volume – : Volume Down
4. 3.5mm Earphone Port
5. Type–C Port
6. Nano SIM / TF (choose two of three)
7. Built–in MIC Port
8. Front Camera
9. Home Key
10. Built–in Speaker Output Hole
11. Docking Port
12. Rear Camera
13. Flashlight

Preparations

Connecting to PC

 
Boot the PC, and connect the device to the PC via the special USB cable, then you can transmit data between the PC and your tablet. Mount as USB mass storage, then you can copy or delete files on your device with your PC.

Notice: While the device is mounted as mass storage, you cannot play the media files in it. ProMa will not be held responsible for damages resulting from this kind of improper operation.

Booting

In shutdown state, long press the power button for 3 seconds and the system will go into the Android progress bar.

Approximately 40 seconds later the system will go into the lock screen. To unlock the screen, slide upward from the bottom of the screen.

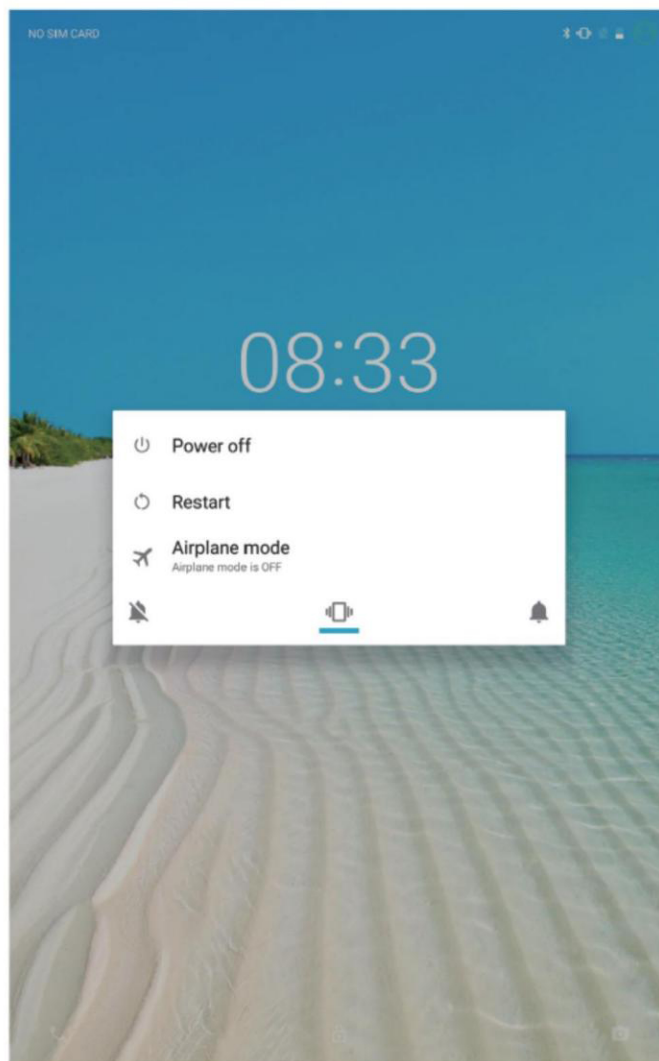

Battery Saving Mode & Screen Lock: When the tablet goes into battery saving mode, the display will black out and the OS will go to the lockscreen. Press the power button again and the screen will be awakened in one second.

Notice: Battery saving mode will only put off the display, running applications such as music player will continue to work.


Notice: If the tablet crashes you should hold down the power button for eight seconds to force a reboot.

 
Shutting down

While the tablet is on, long press the power button for 3 seconds, a shutdown confirmation window will pop up. Choose to “shutdown” and the tablet will be turned off.

Notice: If the battery is too low, the tablet will fire up alarms from time to time. If you don't charge it immediately, it will automatically be turned off while the battery is used up. If you cannot boot the tablet after you connect it to the charging cable, please wait for 5-10 minutes before you try again.


Wi-Fi Settings

1. Turning on: Open the app drawer and find the Setting icon  , touch to open the setting menu, slide the Wi-Fi switcher to turn on Wi-Fi.
2. Choose the available wifi access , for example, the “**ProMa_4**”, then it will require you to put in the password, click “connect” . Once you put in the correct password, the system will help you obtain the IP address. Once it is successfully connected, you will see a connected icon in the status bar.

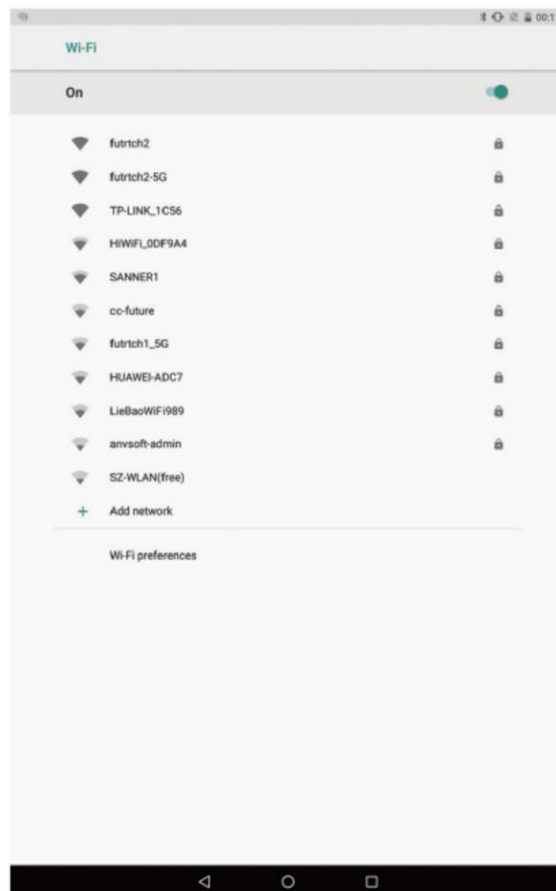


OTA Update

ProMa will push notifications to your tablet if any updated firmwares are available. You can use OTA to update your device. Also you can check the available updated firmware by: Setting - About the tablet - online update.

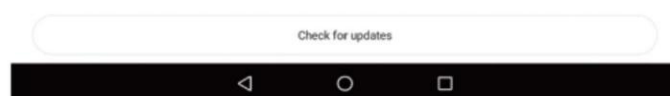


Sight 3D

Tap the “Sight 3D” icon on the home screen, then you can see the main page of the app below:

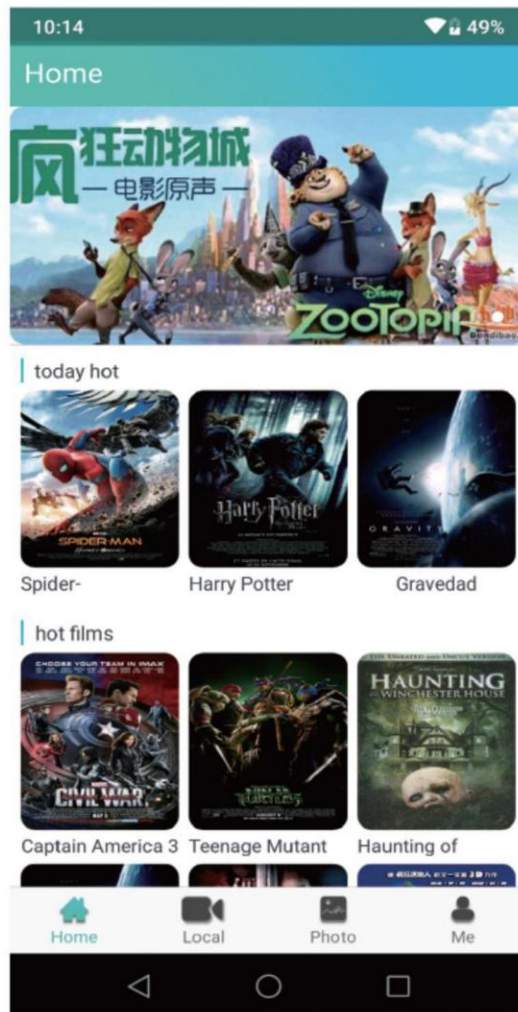

You can enjoy online and local 3D movies. If the movie comes on in side by side mode, please tap the “L/R” button on the top right corner of the screen. If the movie comes on in up and down 3D mode, please tap the “U/D” button on the top right corner of the screen. Then enjoy splendid 3D effects!

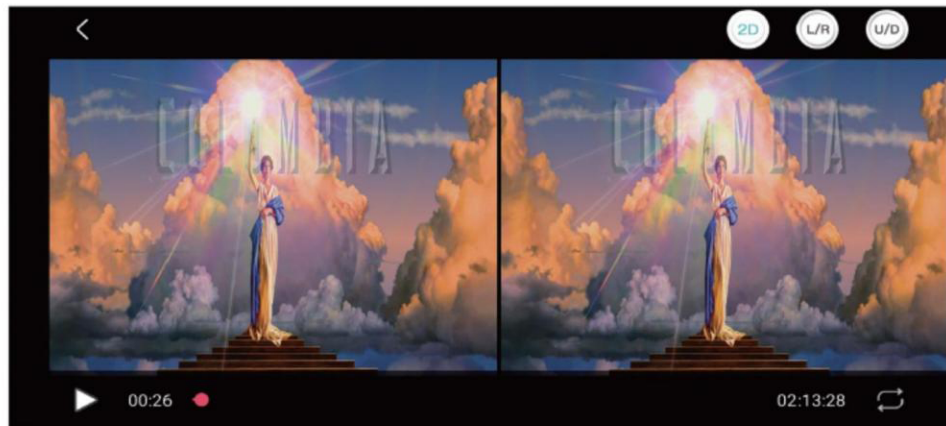

3D Player

Please choose “3D LR video” or “3D UD video”.



3D Camera

Please take a photo on the horizontal screen.



Specifications

Hardware Specs	
CPU	MT6797W/C (X20) 10-core 2.5G
RAM	4GB
ROM	128GB
FM	Yes
Bluetooth	Yes
GPS	Yes
WIFI	IEEE 802.11 a/b/g/n/ac
SD Card	Yes
Display	10.8 inch 2560*1600
Touch Screen	10-point OGS Capacitive Touch Screen
Battery	6000mAh
MIC	Yes
Speaker	High Quality Stereo Sound
G-sensor	Yes
OTG	Yes, external U-disk, keyboard, mouse
OS	Android 8.0.0
Camera	Front 500MP ; Rear 1300MP
SIM Card	Dual SIM (NANO Card)
Network	GSM+CDMD VOLTE+WCDMA+TD-SCDMA+FDD+TDD

Declaration

Please backup your date on a regular basis, ProMa will not be responsible for any date loss or damages due to improper use, product repair and battery exchange. The risks of users misunderstanding of this manual cannot be controlled, ProMa won't be held responsible for any accidental damages, or compensate the third parties for the users' improper use.

Environmental Protection Claims

Hazardous Substances Table


Part Name		Hazardous Substances Table						
		Plumbum	Mercury	Cadmium	Hexavalent chromium (Cr6+)	Polybrominated biphenyls PBB	Poly brominated diphenyl ethers PBDE	Environment Friendly Use Period (EFUP)
		Pb	Hg	Cd				
Mainboard	Mainboard	*	○	○	○	○	○	10
	Display screen	○	○	○	○	○	○	10
	Plastic	○	○	○	○	○	○	10
	Metal	○	○	○	○	○	○	10
Battery		*	○	○	○	○	○	5
Accessory		*	○	○	○	○	○	5

○ : Indicates that this hazardous substance contained in all homogenous materials of this part is below the limit requirements GB/T 26572-2011

* : Indicates that this hazardous substance contained in at least one of the homogenous materials of this part is above the limit requirement in GB/T 26572-2011

Remarks: The reason of indicating “*” is none of substitute technology or parts.

 Use period is valid only when the product is operated under the condition defined in the product manual.



ProMa

www.js3d.cc

www.proma3d.com