SHKOD




Bullets Neck Wireless Earbuds
User Manual

Pairing connection

1 Power on/off

▶ Long press MFB for 3s : Power on

ULong press MFB for 5s: Power off

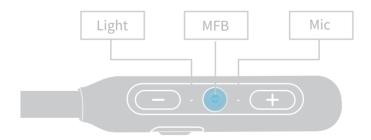

Pairing mode

For the first time using, the earbuds will enter the pairing state automatically after power on.

Long press the function button for 5s, Then the white&orange indicator will flash alternately.







3 Wireless connectivity

Power on the Bluetooth of the pairing device, search the device named "SHKOD Bullets", and connect.





Multi-device connect



- Connect to the first device, then disable Bluetooth of this device after successful connection; connect to the second device.
 - Every time to power on, earbuds will automatically reconnect to the device last connected to.
 - Disable Bluetooth of the device, then it can actively disconnect.









In pairing mode, if the connection is not done within 10 minutes, the earbuds will automatically shut down.

The earbuds will record the device information, and will automatically connect with the device next time.

Music mode

- · · · ▶ Double click :Last song
- • Double click + :Next song
- Click : Decrease volume
- ■) Click +:Increase volume
- Long press MFB for 2s : Activate Voice Assistant

Call mode

- • Click MFB : Answer/Hang up
- • Click MFB : Cancel dialing
- Long press MFB for 2s: Reject a call

 
Low Latency Mode

Click MFB 4 times continuously: Turn on/off

Factory data reset

When the earbuds are not connected to phone and power on, click + / = 4 times continuously. After four times warning beeps, the earbuds will restore to factory settings and power off.

Note: After restored factory setting, you have to delete the original link name on the paired device and reconnect the Bluetooth.



Earbuds charging

Charge via charging cable of USB Type-C

When the earbuds are in charging status, the white light will Power on and will power off after fully charged.



Select earmuffs and wear earbuds

Choose the right&left ear-wings of appropriate size according to the comfort of wearing .

Wearing

- 1.Insert the earbuds tip into the cochlea.
- 2. Press the ear-support into the auricle.
- 3. Adjust the fitness and wear it.







Product safety information

Please read all instructions and warnings before using this product.Improper use will damage the product or create safety issue.

- · To prevent possible hearing damage, do not use a high volume for a long time.
- · Keep the device and accessories away from children and pets. Swallowing it may cause suffocation and other serious consequences.
- ·The battery is built inside of the product, please do not expose it under strong sunlight, keep it from fire or overheating resource; If water get inside of the device, dry it naturally before using.
- ·To avoid electromagnetic interference, keep the device at least 15 cm away from the implantable medical devices or personal medical devices (such as pacemakers, cochlear implants, hearing AIDS, etc.) and consult the device manufacturer for constraints.
- · Company shall not be liable and bear any legal liability for any personal and property loss due to improper use against the warning in the user manual.
- · Disassembly of the product by non-professionals is strictly prohibited.
- \cdot Overvoltage and Overcurrent in exceed of the rated power shall be avoided
- · Intense physical acting force including hitting, throwing, trampling, violent squeezing etc.shall be avoided.
- \cdot The suggested ambient temperature of the product is 0-35°C, and the suggested storage temperature is -20°-45°C. Too high or too low ambient temperature may lead to malfunction.

FAQs

1. Why the earbuds fall off during exercise?

- A: ① The earbuds do not have silicone ear wings. Choose neck-hanging earbuds with silicone ear wings;
- ② The wearing is not correctly. Follow the wearing instructions to ensure that the ear-support is pressed into the auricle;

2. Why my earbuds cannot trun on?

- A: ①Please ensure that sweat does not enter the buttons to corrode the circuit board during exercise;
- ②Please choose earbuds with IPX5 or above, which can prevent damage of the sweat;
- 3 Please check whether the power button is damaged;

3. Why the earbuds can't reconnect with my device?

- A: ① The earbuds will be disconnected beyond 10 meters effective range. And will switch off if keep disconnected over 10 minutes;
- ② Put the earbuds back into the charging case and cover the lid, and take out it again, it will reconnect with your device.

4. Why one of the earbuds is not working?

- A: ① The left or right wire being broken or poor contact;
- 2 Change the music, slightly pull the sub-wire of earbuds and try again;
- ③If still no sound the after above operation, you need to rewire or replace the damaged part.

5. How to keep earbuds in best sound quality status?

- A: ① Play music at one-third of normal volume for 12 hours (softer music);
- ② Play music at two-thirds of normal volume for 12 hours (any music except strong rock music);
- 3 Play music at normal volume for 72 hours (normal music);
- 4 Play music at three-fourths of normal volume for 24 hours (normal music).

6.The wireless earbuds cannot be found in Bluetooth page/Unstable connection/Disconnection during use/Sound lagging

- A: ① Keep earbuds within 10 meter effective range, avoid blocking of wall;
- 2 Make sure the earbuds have enough power, and enter pairing mode, reconnect with the device;
- ③ If above measures did not work, please turn off the Bluetooth and restore factory setting, reconnect again;
- ④ Due to the property of the earbuds, there might be electromagnetic interference to your earbuds in certain area, resulted in sound lagging or disconnection (subway WIFI traffic lights, etc.). Please stay away from electromagnetic radiation source and reconnect again .

The charging data is obtained from test reports provided by the SHKOD laboratory. The actual charging time may vary depending on the operating conditions or individual difference

Product Parameter

Product Name: SHKOD Bullets Farbuds

Product model: Bullets Input: DC 5V = 500mA fast charge

Material: ABS Charging input: DC5V = 1A Bluetooth version: V5.4

Charging time: 1.0h Noise reduction: FNC Frequency response range: 20Hz -- 20KHz

Communication distance: 10m Charging interface: Type-C

Standby time: about 600h Product weight: 25.5g

Playing time: about 45 h volume (60%) Earbud battery: 200mAh/ 3.7V Product size: 81.5*1.3*0.9 (cm) Connect time: 40ms low latency

Product Parameter



Χ4



Warranty card Х1

Brand Name: SHKOD

Company Name: Shkod Electronics Private Limited

Contact Address: Office No 3A, 3rd Floor A-1 Sector-10, Noida, Gautam Buddha

Nagar, Uttar Pradesh-201301

X1

Toll Free: 1800-257-9808 Website: http://www.shkod.com





