

# OPERATING INSTRUCTIONS

EN

Translation of the Original

## **MVP 015-4 DC** Diaphragm Pump

**PFEIFFER**  **VACUUM**

---

## Dear Customer,

Thank you for choosing a Pfeiffer Vacuum product. Your new diaphragm pump should support you in your individual application with full performance and without malfunctions. The name Pfeiffer Vacuum stands for high-quality vacuum technology, a comprehensive and complete range of top-quality products and first-class service. From this extensive, practical experience we have gained a large volume of information that can contribute to efficient deployment and to your personal safety.

In the knowledge that our product must avoid consuming work output, we trust that our product can offer you a solution that supports you in the effective and trouble-free implementation of your individual application.

Please read these operating instructions before putting your product into operation for the first time. If you have any questions or suggestions, please feel free to contact **info@pfeiffer-vacuum.de**.

Further operating instructions from Pfeiffer Vacuum can be found in the [Download Center](#) on our website.

## Disclaimer of liability

These operating instructions describe all models and variants of your product. Note that your product may not be equipped with all features described in this document. Pfeiffer Vacuum constantly adapts its products to the latest state of the art without prior notice. Please take into account that online operating instructions can deviate from the printed operating instructions supplied with your product.

Furthermore, Pfeiffer Vacuum assumes no responsibility or liability for damage resulting from the use of the product that contradicts its proper use or is explicitly defined as foreseeable misuse.

## Copyright

This document is the intellectual property of Pfeiffer Vacuum and all contents of this document are protected by copyright. They may not be copied, altered, reproduced or published without the prior written permission of Pfeiffer Vacuum.

We reserve the right to make changes to the technical data and information in this document.

# Table of contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>About this manual</b>                      | <b>7</b>  |
| 1.1      | Validity                                      | 7         |
|          | 1.1.1 Applicable documents                    | 7         |
|          | 1.1.2 Variants                                | 7         |
| 1.2      | Target group                                  | 7         |
| 1.3      | Conventions                                   | 7         |
|          | 1.3.1 Instructions in the text                | 7         |
|          | 1.3.2 Pictographs                             | 7         |
|          | 1.3.3 Stickers on the product                 | 8         |
|          | 1.3.4 Abbreviations                           | 8         |
| <b>2</b> | <b>Safety</b>                                 | <b>10</b> |
| 2.1      | General safety instructions                   | 10        |
| 2.2      | Safety instructions                           | 10        |
| 2.3      | Safety precautions                            | 11        |
| 2.4      | Product usage limits                          | 12        |
| 2.5      | Proper use                                    | 12        |
| 2.6      | Foreseeable improper use                      | 12        |
| <b>3</b> | <b>Product description</b>                    | <b>14</b> |
| 3.1      | Product identification                        | 14        |
| 3.2      | Shipment                                      | 14        |
| 3.3      | Function                                      | 14        |
| <b>4</b> | <b>Transportation and Storage</b>             | <b>16</b> |
| 4.1      | Transporting the vacuum pump                  | 16        |
| 4.2      | Storing the vacuum pump                       | 16        |
| <b>5</b> | <b>Installation</b>                           | <b>17</b> |
| 5.1      | Installing the vacuum pump                    | 17        |
| 5.2      | Connecting the vacuum side                    | 17        |
| 5.3      | Connecting the exhaust side                   | 18        |
| 5.4      | Grounding the vacuum pump                     | 18        |
| 5.5      | Interfaces                                    | 18        |
|          | 5.5.1 Voltage supply                          | 21        |
|          | 5.5.2 Inputs                                  | 21        |
|          | 5.5.3 Outputs                                 | 21        |
|          | 5.5.4 RS-485 interface allocation             | 22        |
|          | 5.5.5 Cross-linked via the RS-485 connection  | 22        |
|          | 5.5.6 Connection options via interface RS-485 | 23        |
| 5.6      | Pfeiffer Vacuum protocol for RS-485 interface | 24        |
|          | 5.6.1 Telegram frame                          | 24        |
|          | 5.6.2 Telegram description                    | 24        |
|          | 5.6.3 Telegram example 1                      | 24        |
|          | 5.6.4 Telegram example 2                      | 25        |
|          | 5.6.5 Data types used                         | 25        |
| <b>6</b> | <b>Operation</b>                              | <b>26</b> |
| 6.1      | Putting the vacuum pump into operation        | 26        |
| 6.2      | Operating modes                               | 26        |
| 6.3      | Switching on the vacuum pump                  | 27        |
| 6.4      | Operation with Pfeiffer Vacuum parameter set  | 27        |
|          | 6.4.1 General                                 | 27        |
|          | 6.4.2 Parameter overview                      | 28        |
|          | 6.4.3 Control commands                        | 28        |
|          | 6.4.4 Status requests                         | 29        |
|          | 6.4.5 Reference value inputs                  | 30        |

|           |   |           |
|-----------|---|-----------|
| 6.4.6     | Configuring the connections with the PV parameter set | 30        |
| 6.4.7     | Speed actuator operation                              | 31        |
| 6.4.8     | Standby mode  | 31        |
| 6.4.9     | Normal operation                                      | 31        |
| 6.5       | Operation monitoring                                  | 31        |
| 6.5.1     | Operating mode display via LED                        | 31        |
| 6.5.2     | Temperature monitoring                                | 32        |
| 6.6       | Switching off the vacuum pump                         | 32        |
| <b>7</b>  | <b>Maintenance</b>                                    | <b>33</b> |
| 7.1       | Maintenance instructions                              | 33        |
| 7.2       | Checklist for inspection and maintenance              | 33        |
| 7.3       | Replace the diaphragms and valves                     | 34        |
| <b>8</b>  | <b>Decommissioning</b>                                | <b>36</b> |
| 8.1       | Decommissioning the vacuum pump for longer periods    | 36        |
| 8.2       | Disposing of the vacuum pump                          | 36        |
| <b>9</b>  | <b>Errors</b>   | <b>37</b> |
| <b>10</b> | <b>Service solutions from Pfeiffer Vacuum</b>         | <b>39</b> |
| <b>11</b> | <b>Spare parts</b>                                    | <b>41</b> |
| 11.1      | Ordering spare parts packs                            | 41        |
| <b>12</b> | <b>Accessories</b>                                    | <b>42</b> |
| <b>13</b> | <b>Technical data and dimensions</b>                  | <b>43</b> |
| 13.1      | General   | 43        |
| 13.2      | Technical data  | 43        |
| 13.3      | Substances in contact with the media                  | 44        |
| 13.4      | Dimensions  | 44        |
|           | <b>Declaration of conformity</b>                      | <b>46</b> |

## List of tables

|          |   |    |
|----------|---|----|
| Tbl. 1:  | Stickers on the product   | 8  |
| Tbl. 2:  | Abbreviations used in this document   | 9  |
| Tbl. 3:  | Usage limits of the vacuum pump   | 12 |
| Tbl. 4:  | Ambient conditions for MVP 015-4 DC   | 17 |
| Tbl. 5:  | Connection plug arrangement Simple Pump Interface D-Sub-socket, 15-pin          | 19 |
| Tbl. 6:  | Definition of the RS-485 interface  | 22 |
| Tbl. 7:  | Factory setting of the electronic drive unit for diaphragm pumps when delivered | 26 |
| Tbl. 8:  | Explanation and meaning of the parameters                                       | 28 |
| Tbl. 9:  | Parameter set   Control commands  | 29 |
| Tbl. 10: | Parameter set   Status requests   | 29 |
| Tbl. 11: | Parameter set   Reference value inputs  | 30 |
| Tbl. 12: | Configuration with parameters [P:019] and [P:024]                               | 30 |
| Tbl. 13: | Configuration with parameters [P:060] and [P:061]                               | 30 |
| Tbl. 14: | Behavior and meaning of the LED of the electronic drive unit                    | 32 |
| Tbl. 15: | Maintenance intervals for diaphragm pumps                                       | 34 |
| Tbl. 16: | Troubleshooting on diaphragm pumps  | 38 |
| Tbl. 17: | Spare parts packs for the MVP 015-4 DC  | 41 |
| Tbl. 18: | MVP 015-4 DC accessories  | 42 |
| Tbl. 19: | Conversion table: Pressure units  | 43 |
| Tbl. 20: | Conversion table: Units for gas throughput                                      | 43 |
| Tbl. 21: | Technical data MVP 015-4 DC   | 44 |
| Tbl. 22: | Materials that touch the process media inside the diaphragm pump                | 44 |

## List of figures

|          |   |    |
|----------|---|----|
| Fig. 2:  | Position of the labels on the product   | 8  |
| Fig. 3:  | Rating plate MVP 015-4 DC   | 14 |
| Fig. 4:  | Design of the MVP 015-4 DC  | 15 |
| Fig. 5:  | Connection of the grounding cable to the MVP 015-4                                    | 18 |
| Fig. 6:  | Pin assignment of the D-Sub socket, 15-pin  | 19 |
| Fig. 7:  | Connection example: MVP 015-4 – DCU/TPS with connecting cable<br>PM 061 350 -T        | 20 |
| Fig. 8:  | Connection example: MVP 015-4 – HiPace/DCU/TPS with connecting cable<br>PE 100 013 -T | 20 |
| Fig. 9:  | Networking via the RS-485 interface   | 23 |
| Fig. 10: | Connection options via interface RS-485   | 23 |
| Fig. 11: | Replacing the diaphragms and valves on the MVP 015-4                                  | 35 |
| Fig. 12: | Spare parts for the MVP 015-4 DC  | 41 |
| Fig. 13: | Dimension diagram of MVP 015-4 DC   standard design                                   | 44 |
| Fig. 14: | Dimension diagram of MVP 015-4 DC   pumping station design                            | 45 |

# 1 About this manual



## IMPORTANT

Read carefully before use.  
Keep the manual for future consultation.

## 1.1 Validity

These operating instructions are for customers of Pfeiffer Vacuum. They describe the function of the designated product and provide the most important information for safe usage of the product. The descriptions comply with applicable directives. All information provided in these operating instructions refer to the current development status of the product. The documentation remains valid as long as the customer does not modify the product in any way.

### 1.1.1 Applicable documents

| Designation               | Document                          |
|---------------------------|-----------------------------------|
| Declaration of conformity | A component of these instructions |

### 1.1.2 Variants

These instructions apply to diaphragm pumps of the DC series:

- MVP 015-4 DC as standard version
- MVP 015-4 DC in the version for integration in a pumping station (without base plate)

## 1.2 Target group

This operating instructions are aimed at all persons performing the following activities on the product:

- transport,
- setup (installation),
- usage and operation,
- decommissioning,
- maintenance and cleaning,
- storage or disposal.

The work described in this document is only permitted to be performed by persons with the appropriate technical qualifications (expert personnel) or who have received the relevant training from Pfeiffer Vacuum.

## 1.3 Conventions

### 1.3.1 Instructions in the text

Usage instructions in the document follow a general structure that is complete in itself. The required action is indicated by an individual step or multi-part action steps.

#### Individual action step

A horizontal, solid triangle indicates the only step in an action.

- ▶ This is an individual action step.

#### Sequence of multi-part action steps

The numerical list indicates an action with multiple necessary steps.

1. Step 1
2. Step 2
3. ...

### 1.3.2 Pictographs

Pictographs used in the document indicate useful information.






Note



Tip

### 1.3.3 Stickers on the product

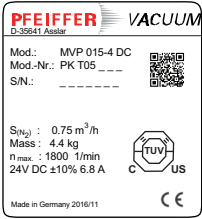This section describes all the stickers on the product along with their meaning.

|  |  |
|--|--|
|   | <p><b>Rating plate (example)</b><br/>The rating plate is located on the cover of the electronics.</p>  |
|   | <p><b>Closure seal</b><br/>The 4 diaphragm heads are sealed at the factory. Damaging or removing a closure seal results in loss of the warranty.</p> |
|  | <p><b>Warning of hot surfaces</b><br/>The label warns of hot surfaces during operation or immediately after switching off the vacuum pump.</p>       |

Tbl. 1: Stickers on the product

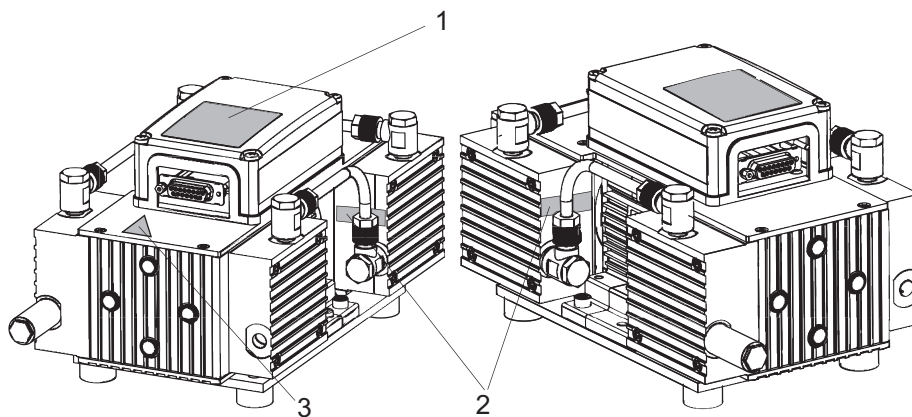


Fig. 2: Position of the labels on the product

- 1 Rating plate of the diaphragm pump
- 2 Closure seal
- 3 Hot surface warning sign

### 1.3.4 Abbreviations

| Abbreviation | Meaning in this document   |
|--------------|--|
| MVP          | Diaphragm Pump   |
| DC           | Direct Current   |
| DCU          | Display Control Unit (Pfeiffer Vacuum display and control unit).             |
| DN           | Nominal diameter as size description   |
| f            | Rotation speed value of a vacuum pump (frequency, in rpm or Hz)              |
| HPU          | Handheld Programming Unit. Aid for control and monitoring of pump parameters |




| Abbreviation | Meaning in this document  |
|--------------|---|
| LED          | Illuminating diode  |
| PE           | Earthed conductor (protective earth)  |
| [P:xxx]      | Electronic drive unit control parameters. Printed in bold as three-digit number in square brackets. Frequently displayed in conjunction with a short description.<br>Example: <b>[P:312]</b> software version |
| T            | Temperature (in °C), property abbreviation of the vacuum pump   |
| TC           | Turbopump electronic drive unit (turbo controller)  |
| TPS          | Voltage supply (turbo power supply)   |

**Tbl. 2: Abbreviations used in this document**

## 2 Safety

### 2.1 General safety instructions

This document includes the following four risk levels and one information level.

|  |   |
|--|---|
| <b>⚠ DANGER</b>  |   |
| <p><b>Imminent danger</b><br/>Indicates a hazardous situation which, if not avoided, will result in death or serious injury.</p> <ul style="list-style-type: none"> <li>▶ Instructions on avoiding the hazardous situation</li> </ul>            |   |
| <b>⚠ WARNING</b>   |   |
| <p><b>Possibly imminent danger</b><br/>Indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p> <ul style="list-style-type: none"> <li>▶ Instructions on avoiding the hazardous situation</li> </ul>  |   |
| <b>⚠ CAUTION</b>   |   |
| <p><b>Possibly imminent danger</b><br/>Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.</p> <ul style="list-style-type: none"> <li>▶ Instructions on avoiding the hazardous situation</li> </ul> |   |
| <b>NOTICE</b>  |   |
| <p><b>Danger of property damage</b><br/>Notice is used to address practices not related to physical injury.</p> <ul style="list-style-type: none"> <li>▶ Instructions on avoiding property damage</li> </ul>                                     |   |
| <div style="border: 1px solid black; padding: 5px; display: inline-block;">  </div>   | <p>Notes, tips or examples indicate important information on the product or on this document.</p> |

### 2.2 Safety instructions

All safety instructions in this document are based on the results of the risk assessment carried out in accordance with Machinery Directive 2006/42/EC Annex I and EN ISO 12100 Section 5. As far as applicable, all unit life cycle phases have been considered.

#### Risks during installation

|  |
|--|
| <b>⚠ DANGER</b>  |
| <p><b>Danger to life from electric shock</b><br/>When establishing the voltages that exceed the specified safety extra-low voltage (according to IEC 60449 and VDE 0100), the insulating measures will be destroyed. There is a danger to life from electric shock at the communication interfaces.</p> <ul style="list-style-type: none"> <li>▶ Connect only suitable devices to the bus system.</li> </ul>   |
| <b>⚠ CAUTION</b>   |
| <p><b>Danger of injury from bursting as a result of high pressure in the exhaust line</b><br/>Faulty or inadequate exhaust pipes lead to dangerous situations, e.g., increased exhaust pressure. There is a danger of bursting. Injuries caused by flying fragments, the escaping of high pressure, and damage to the unit cannot be excluded.</p> <ul style="list-style-type: none"> <li>▶ Route the exhaust line without shut-off units.</li> <li>▶ Observe the permissible pressures and pressure differentials for the product.</li> <li>▶ Check the function of the exhaust line on a regular basis.</li> </ul> |

## Risks during operation

**⚠ WARNING****Danger of poisoning due to toxic process media escaping from the exhaust pipe**

During operation with no exhaust line, the vacuum pump allows exhaust gases and vapors to escape freely into the air. There is a risk of injury and fatality due to poisoning in processes with toxic process media.

- ▶ Observe the pertinent regulations for handling toxic process media.
- ▶ Safely purge toxic process media via an exhaust line.
- ▶ Use appropriate filter equipment to separate toxic process media.

**⚠ CAUTION****Danger of burns on hot surfaces**

Depending on the operating and ambient conditions, the surface temperature of the vacuum pump can increase to above 70 °C.

- ▶ Provide suitable touch protection.

## Risks during maintenance, decommissioning and in event of malfunctions

**⚠ WARNING****Health hazard through poisoning from toxic contaminated components or devices**

Toxic process media result in contamination of devices or parts of them. During maintenance work, there is a risk to health from contact with these poisonous substances. Illegal disposal of toxic substances causes environmental damage.

- ▶ Take suitable safety precautions and prevent health hazards or environmental pollution by toxic process media.
- ▶ Decontaminate affected parts before carrying out maintenance work.
- ▶ Wear protective equipment.

**⚠ CAUTION****Danger of injury from moving parts**

After a power failure or a standstill as a result of overheating, the motor restarts automatically. There is a risk of injury to fingers and hands if they enter the operating range of rotating parts.

- ▶ Safely disconnect motor from the mains.
- ▶ Secure the motor against reactivation.
- ▶ Dismantle the vacuum pump for inspection, away from the system if necessary.

**⚠ CAUTION****Danger of burns on hot surfaces**

In the event of a fault, the surface temperature of the vacuum pump can increase to above 105°C.

- ▶ Allow the vacuum pump to cool down before working on it.
- ▶ Wear personal protective equipment if necessary.

## 2.3 Safety precautions

**Duty to provide information on potential dangers**

The product holder or user is obliged to make all operating personnel aware of dangers posed by this product.

Every person who is involved in the installation, operation or maintenance of the product must read, understand, and adhere to the safety-related parts of this document.



**Infringement of conformity due to modifications to the product**

The Declaration of Conformity from the manufacturer is no longer valid if the operator changes the original product or installs additional equipment.

- Following installation into a system, the operator is required to check and re-evaluate as necessary the conformity of the overall system in the context of the relevant European Directives before commissioning that system.

**General safety precautions when handling the product**

- ▶ Observe that the **current supply** of the vacuum pump must meet the requirements for double isolation between mains input voltage and operating voltage, as per IEC 61010 and IEC 60950. Pfeiffer Vacuum recommends that only original power supply packs are used.  
Pfeiffer Vacuum guarantees compliance with the requirements of European and North American guidelines only in this case.
  - The **maximum short-circuit current** of the voltage source/power supply pack must not exceed **45 A**
- ▶ Prevent process gases and their reaction and ancillary products that are harmful to health and the environmental from escaping, or dispose of these according to the applicable regulations.
- ▶ Avoid contact with process gases that are harmful to health and if required, wear personal protective clothing.
- ▶ Check the media compatibility of parts carrying media.
- ▶ Observe all applicable safety and accident prevention regulations.
- ▶ Check that all safety measures are observed at regular intervals.
- ▶ Do not expose body parts to the vacuum.
- ▶ Recommendation: Establish a secure connection to the earthed conductor (PE); protection class III.
- ▶ Never disconnect plug connections during operation.
- ▶ Never fill or operate the unit with cleaning agents or cleaning agent residues.
- ▶ Do not carry out your own conversions or modifications on the unit.
- ▶ Observe the unit protection class prior to installation or operation in other environments.
- ▶ Provide suitable touch protection, if the surface temperature exceeds 70°C.
- ▶ Keep lines and cables away from hot surfaces (> 70 °C).
- ▶ Before returning the vacuum pumps, observe the notes in the chapter Service solutions. ([see chapter “Service solutions from Pfeiffer Vacuum”, page 39](#)).

**2.4 Product usage limits**

| Parameter   | MVP 015-4 DC    |
|---|-----------------|
| Ambient temperature                                   | +5 °C to +40 °C |
| Permissible intake temperature of medium to be pumped | +5 °C to +40 °C |

**Tbl. 3: Usage limits of the vacuum pump**

**2.5 Proper use**

- The vacuum pump may only be used for vacuum generation.
- It is not permissible to operate the vacuum pump with accessories not recommended by Pfeiffer Vacuum.
- Always observe installation, commissioning, operating, and maintenance instructions.

**2.6 Foreseeable improper use**

Improper use of the product invalidates all warranty and liability claims. Improper use is any, even unintended, use, which is contrary to the product purpose; and in particular:


- Pumping of corrosive media
- Pumping explosive media
- Pumping corrosive, explosive, radioactive, or volatile media
- Pumping of gases that introduce an ignition source to the suction chamber

- Pumping of gases that contain impurities such as particles, dust, or condensate
- Pumping of fluids
- Pumping FPM-solubilizing media
- Pumping vapors from combustible liquids
- Pumping pressurized media (> atmospheric pressure)
- Pumping media that can condense or cause adhering deposits to form in the suction chamber
- Use of the vacuum pump outside the specified area of application
- Using the vacuum pump below ground
- Using the vacuum pump to generate pressure
- Using the vacuum pump in systems in which sporadic loads and vibrations or periodic forces act on the unit
- Using the vacuum pump in strong electrical, magnetic, or electromagnetic fields
- Connection to vacuum pumps or equipment which are not suitable for this purpose according to their operating instructions
- Connection to devices with exposed live parts
- Connecting to sockets without earthing contact
- Using lubricants not specified by Pfeiffer Vacuum
- Using pipes to lift the vacuum pump
- Use of accessories or spare parts that are not listed in these instructions
- Using the vacuum pump as a climbing aid
- Using the connection lines between the diaphragm heads as carrying handles
- Using the vacuum pump in ambient conditions that do not meet the specified IP protection class limits

## 3 Product description

### 3.1 Product identification

To ensure unambiguous identification of the product when communicating with Pfeiffer Vacuum, always keep all of the information on the rating plate to hand.

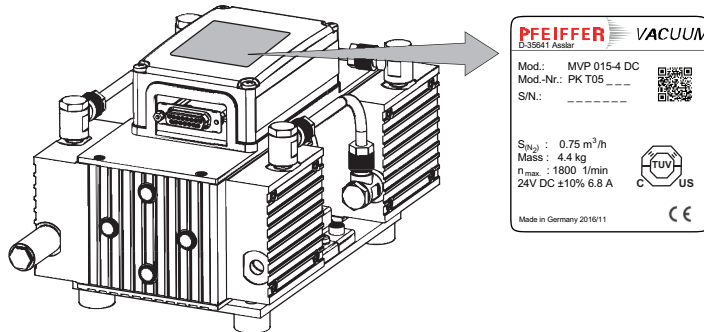

**Fig. 3: Rating plate MVP 015-4 DC**

The following information is shown on the rating plate:


- Pump model
- Model number
- Date of manufacture

### 3.2 Shipment

- Vacuum pump with drive
- Silencer
- Operating instructions
- Blind plug on the vacuum connection

### 3.3 Function

The MVP 015-4 DC series diaphragm pump is a dry compressing vacuum pump with 4 pumping stages. The vacuum pump is a positive displacement pump with a periodic change in suction chamber size, produced by the movement of the diaphragm. The gas flow causes the valves to open and close automatically. The pump units are directly connected to the drive motor.

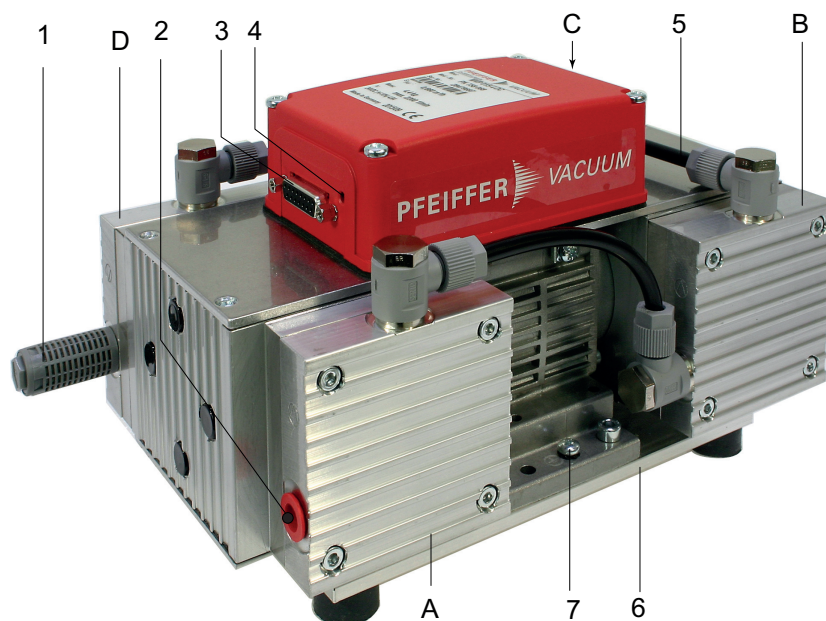

**Fig. 4: Design of the MVP 015-4 DC**

- |   |                                |   |                   |
|---|--------------------------------|---|-------------------|
| A | Diaphragm head 1               | 3 | Plug-in connector |
| B | Diaphragm head 2               | 4 | LED               |
| C | Diaphragm head 3               | 5 | Hose connection   |
| D | Diaphragm head 4               | 6 | Base plate        |
| 1 | Exhaust with silencer          | 7 | Grounding screw   |
| 2 | Vacuum connection, 1/8" thread |   |                   |

## 4 Transportation and Storage

### 4.1 Transporting the vacuum pump



Pfeiffer Vacuum recommends keeping the transport packaging and original protective cover.

In order to prevent dirt and foreign matter from entering the pump interior, it is important that the protective cap is kept on the vacuum connection during transport.

1. Unpacking the vacuum pump.
2. On the front side, reach below the two diaphragm heads and manually lift the vacuum pump out of the transport packaging.
3. Make sure that no forces are acting on the piping system.

### 4.2 Storing the vacuum pump



Pfeiffer Vacuum recommends storing the products in their original transport packaging.

#### Procedure

1. Seal the vacuum connection with the blind plug.
2. Store the vacuum pump only in dry, dust-free rooms, within the specified ambient conditions.
3. Hermetically shrink-wrap the vacuum pump together with a drying agent in a plastic bag if the vacuum pump is to be stored in areas with damp or aggressive atmospheres.



## 5 Installation

### 5.1 Installing the vacuum pump

|                                    |  |
|------------------------------------|--|
| Installation location              | Inside, protected against the accumulation of dust and weather influences  |
| Protection system, class, category | IP 20  |
| Installation altitude              | max. 2000 m above sea level<br>at an installation location above 1000 meters above sea level, there is a risk of insufficient cooling.<br>if necessary, take measures according to Directive DIN EN 61010. |
| Ambient temperature                | +5 °C to +40 °C  |
| Relative air humidity              | 80% at T ≤ 31 °C, to max. 50% at T ≤ 40 °C   |
| Degree of contamination            | 2  |
| Excess voltage category            | II   |

**Tbl. 4: Ambient conditions for MVP 015-4 DC**

#### Notes on installing the vacuum pump

1. Place the vacuum pump on a flat, horizontal surface.
2. For stationary installation, screw the vacuum pump direct to the mounting surface if necessary.
  - Dismantle the base plate for this.
3. When installing the pump in a closed housing, ensure adequate air circulation.
4. Keep the specifications on the motor rating plate visible and freely accessible.

### 5.2 Connecting the vacuum side



#### Preventing pressure losses

Using the shortest possible vacuum connection lines with large nominal diameter prevents pressure losses.



#### Condensate separator

Pfeiffer Vacuum recommends the installation of a condensate separator in case vapors are formed from moisture during evacuation.

#### Procedure

1. Remove the locking cap from the vacuum connection.
2. Install the connection between vacuum pump and vacuum system so that it is as short as possible.
3. Install a condensate separator upstream of the vacuum pump.
4. Connect the vacuum pump to the vacuum system using the vacuum connection.

### 5.3 Connecting the exhaust side

**⚠ CAUTION**

**Danger of injury from bursting as a result of high pressure in the exhaust line**


Faulty or inadequate exhaust pipes lead to dangerous situations, e.g., increased exhaust pressure. There is a danger of bursting. Injuries caused by flying fragments, the escaping of high pressure, and damage to the unit cannot be excluded.

- ▶ Route the exhaust line without shut-off units.
- ▶ Observe the permissible pressures and pressure differentials for the product.
- ▶ Check the function of the exhaust line on a regular basis.

The silencer is mounted as standard. With higher gas throughput, an optional exhaust line can be mounted.

1. Check the installed silencer for free passage.
2. Choose a minimum exhaust line cross section equal to the connection nominal diameter.
3. Depending on the pump type, use metallic hoses or PVC hoses with flange connections.
4. Route the piping downwards from the vacuum pump, to prevent condensate return.
5. Support or suspend the piping to the vacuum pump so that no piping system forces act on the vacuum pump.

### 5.4 Grounding the vacuum pump

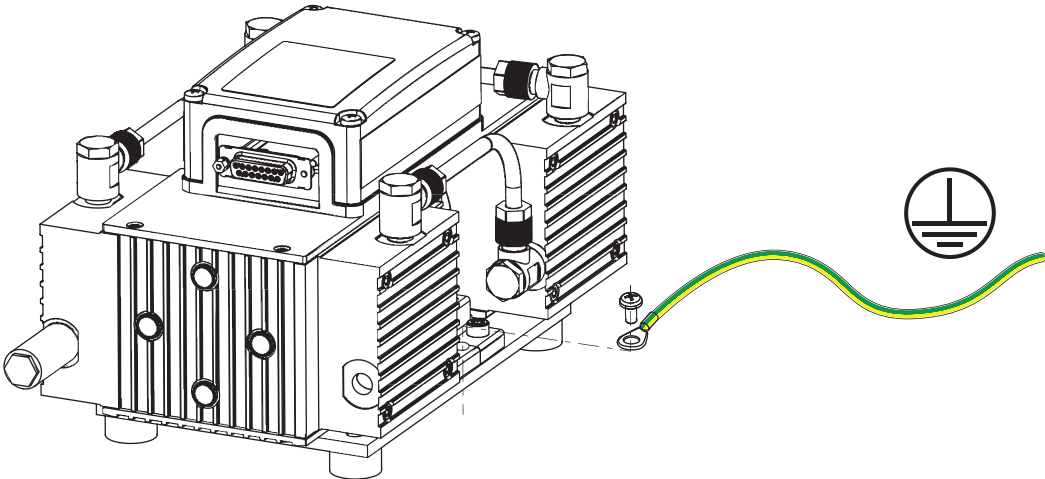

**Fig. 5: Connection of the grounding cable to the MVP 015-4**

1. Use a suitable grounding cable to avoid applicative interferences.
2. Route the connection in accordance with locally applicable provisions.
3. Use the designated ground terminal (M4 female thread) on the vacuum pump.


### 5.5 Interfaces

**NOTICE**

**Property damage on the electronics**

Separating all plug-and-socket connections within the bus system with voltage supply switched on may lead to the destruction of electronic components.

- ▶ Always interrupt the voltage supply before disconnecting the connecting plug.
- ▶ After switching off the power supply pack, wait until the residual load has dispersed completely before disconnecting the plug-and-socket connection.

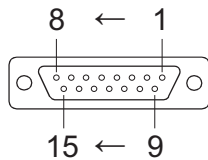

**Fig. 6:** Pin assignment of the D-Sub socket, 15-pin

| Pin | Function           | Description, factory setting  |
|-----|--------------------|---|
| 1   | +24 VDC input      | Voltage supply for drive and interface  |
| 2   | DI access request  | V+: Control via DIs, --> GND/open: Control unlocked   |
| 3   | DI1                | V+: Rotation speed setting mode, --> GND/open: no rotation speed setting mode   |
| 4   | DI2                | Only valid for vacuum pumps with a solenoid valve; the following then applies:<br>V+: Release valve, --> GND/open: Valve closed |
| 5   | DI pumping station | V+: Vacuum pump on, --> GND/open: Vacuum pump off   |
| 6   | DI standby         | V+: standby, --> GND/open: no standby   |
| 7   | V+                 | 24 V output   |
| 8   | DO1                | GND: Error, V+: no error  |
| 9   | DO2                | GND: Vacuum pump off, V+: Vacuum pump on  |
| 10  | n.c.               |   |
| 11  | n.c.               |   |
| 12  | n.c.               |   |
| 13  | RS-485             | D+  |
| 14  | RS-485             | D-  |
| 15  | Earth (GND)        | Body contact of the voltage supply; reference earth for all digital inputs and outputs  |

**Tbl. 5:** Connection plug arrangement Simple Pump Interface D-Sub-socket, 15-pin

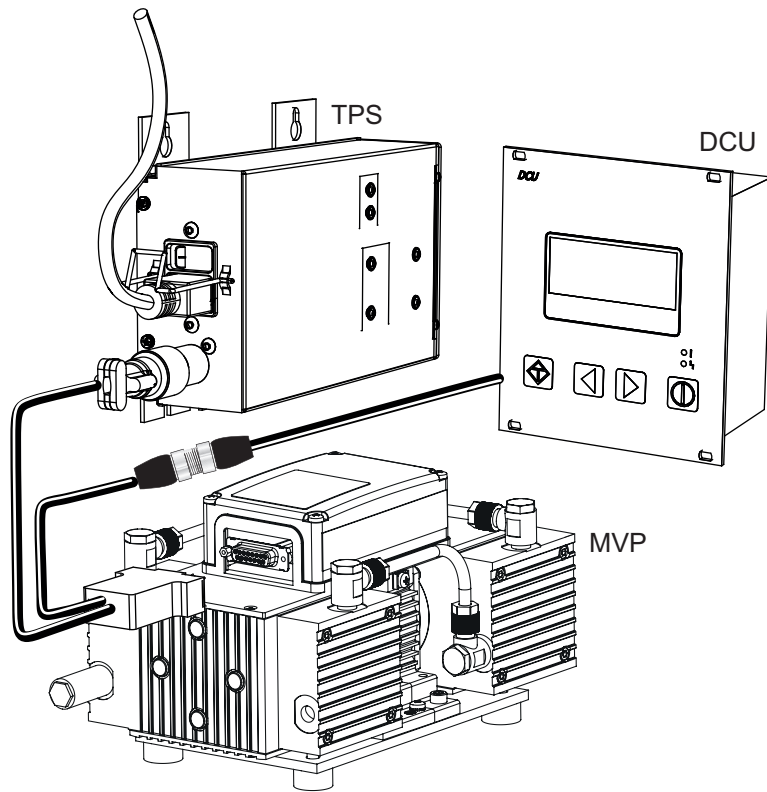


Fig. 7: Connection example: MVP 015-4 – DCU/TPS with connecting cable PM 061 350 -T

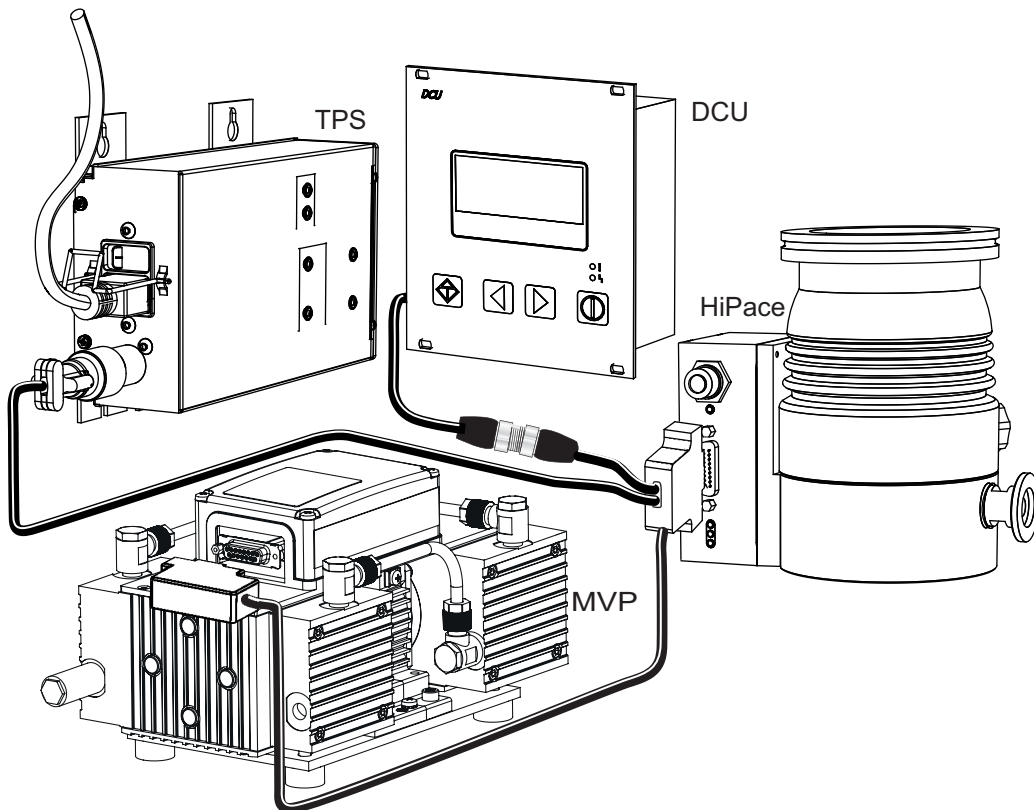


Fig. 8: Connection example: MVP 015-4 – HiPace/DCU/TPS with connecting cable PE 100 013 -T

## 5.5.1 Voltage supply

**24 V DC input:** The voltage supply is carried out using a connecting cable from the Pfeiffer Vacuum accessories or using a cable provided by the customer.

- **Pin 1:** +24 V DC
- **Pin 15:** Earth (GND)

**24 V DC output / pin 7:** Inputs 2 to 6 are activated if they are connected to pin 7 (active high) with +24 VDC. They can also be activated via an external SPS. The functions are deactivated by "SPS high level" and by "SPS low level".

- PLC High level: +13 V to +33 V
- PLC High level: -33 V to +7 V
- Ri: 7 k $\Omega$
- $I_{\max} < 200$  mA

## 5.5.2 Inputs

The digital inputs serve the switching of different functions of the electronic drive unit:

### DI (remote priority)/pin 2

V+: The connection has an operating supremacy before all other digital inputs.

open: Remote priority "inactive"

### DI1 (rotation speed setting mode)/pin 3

V+: Rotation speed setting mode "active"

open: Rotation speed setting mode "inactive"

### DI2 (valve)/pin 4

V+: Valve "released"

open: Valve "closed"

### DI vacuum pump/pin 5

The vacuum pump is switched on and the connected components are controlled (e.g. purging gas valve)

V+: Vacuum pump on

open: Vacuum pump off

### DI Standby

The stand-by speed can be selected in the range **30 to 100%** of the nominal speed.

V+: Standby activated (rotation speed setting mode is "inactive")

GND/open: Standby off, operation at nominal rotation speed

## 5.5.3 Outputs

The digital outputs on 15-pin D-Sub connection can be loaded with maximum 24 V/50 mA per output. All outputs listed below are configurable with the Pfeiffer Vacuum parameter set via the RS-485 interface (description relates to factory settings).

### DO1 (error)/pin 8

After applying the voltage supply, the digital output DO1 permanently outputs V+ meaning which means "no error". "Active low" means error (common error message).

V+: no error

GND: Defect

### DO2 (set rotation speed)/pin 9

"Active high" means "Set rotation speed reached". The signal can, for example, be used for a "Vacuum pump ready for operation" message.

V+: Target speed reached

GND: Set rotation speed not reached

### 5.5.4 RS-485 interface allocation

**⚠ DANGER**

**Danger to life from electric shock**

When establishing the voltages that exceed the specified safety extra-low voltage (according to IEC 60449 and VDE 0100), the insulating measures will be destroyed. There is a danger to life from electric shock at the communication interfaces.

- ▶ Connect only suitable devices to the bus system.

The connection of a Pfeiffer Vacuum display and control panel (DCU or HPU) or an external PC are each possible on pin 13 and pin 14.

- One external control unit each can be connected at the RS-485 interface.
- The group address of the electronic drive unit is 902.
- All devices connected to the bus must have different RS-485 device addresses **[P:797]**.
- A USB interface (PC) can be connected via the USB/RS-485-converter.

| Designation      | Value            |
|------------------|------------------|
| Serial interface | RS-485           |
| Baudrate         | 9600 Baud        |
| Data word length | 8 bit            |
| Parity           | none (no parity) |
| Start bits       | 1                |
| Stop bits        | 1                |

**Tbl. 6: Definition of the RS-485 interface**

### 5.5.5 Cross-linked via the RS-485 connection

**⚠ DANGER**

**Danger to life from electric shock**

When establishing the voltages that exceed the specified safety extra-low voltage (according to IEC 60449 and VDE 0100), the insulating measures will be destroyed. There is a danger to life from electric shock at the communication interfaces.

- ▶ Connect only suitable devices to the bus system.

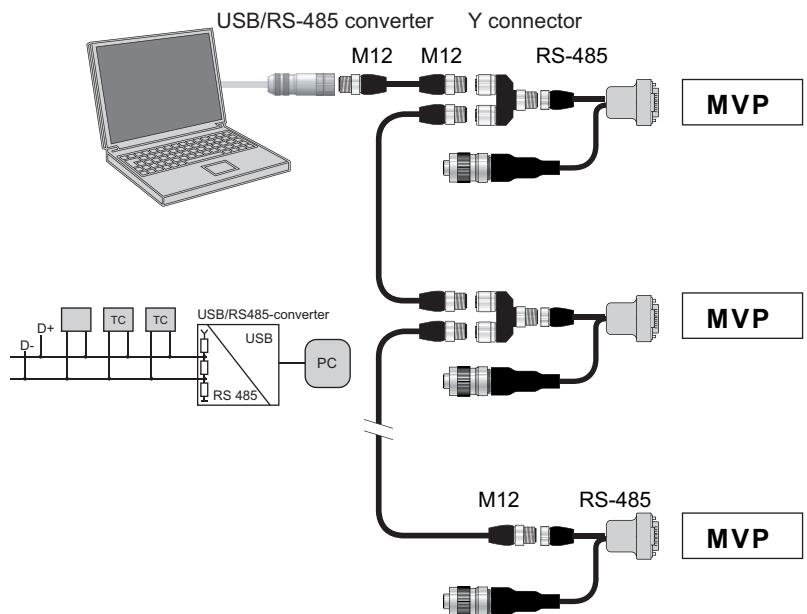


Fig. 9: Networking via the RS-485 interface

### 5.5.6 Connection options via interface RS-485

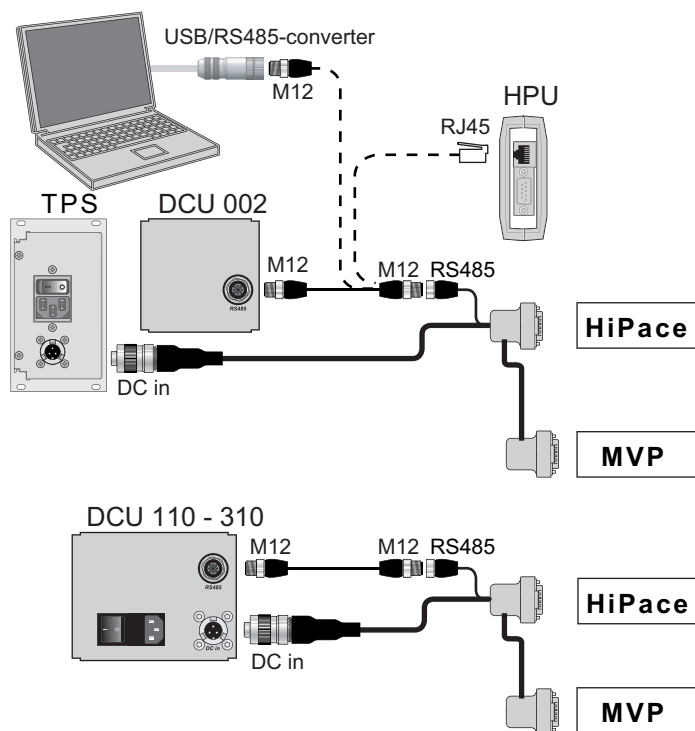


Fig. 10: Connection options via interface RS-485



#### Connecting Pfeiffer Vacuum display and control panels or PC


At interface RS-485, one external control panel can be connected in each case.

1. Use the respective connection cable supplied with the control panel or from the range of accessories.
2. Use the option to connect a PC via the USB/RS-485 converter.

## 5.6 Pfeiffer Vacuum protocol for RS-485 interface

### 5.6.1 Telegram frame

The telegram frame of the Pfeiffer Vacuum protocol contains only ASCII code characters [32; 127], the exception being the end character of the telegram  $C_R$ . Basically, a master  (e.g. a PC) sends a telegram, which is answered by a slave  (e.g. electronic drive unit or transmitter).

|         |    |  |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
|---------|----|--|---|---|----|----|----|----|----|----|-----|----|----|----|----|-------|
| a2      | a1 | a0   | * | 0 | n2 | n1 | n0 | l1 | l0 | dn | ... | d0 | c2 | c1 | c0 | $C_R$ |
| a2 – a0 |    | Unit address for slave    |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
|         |    | <ul style="list-style-type: none"> <li>Individual address of the unit ["001";"255"]</li> <li>Group address "9xx" for all identical units (no response)</li> <li>global address "000" for all units on the bus (no response)</li> </ul> |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
| *       |    | Action according to telegram description   |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
| n2 – n0 |    | Pfeiffer Vacuum parameter numbers  |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
| l1 – l0 |    | Data length dn to d0   |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
| dn – d0 |    | Data in the respective data type (see chapter "Data types used", page 25).   |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
| c2 – c0 |    | Checksum (sum of ASCII values of cells a2 to d0) modulo 256  |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
| $C_R$   |    | carriage return (ASCII 13)   |   |   |    |    |    |    |    |    |     |    |    |    |    |       |

### 5.6.2 Telegram description

**Data query**  -->  ?

|    |    |    |   |   |    |    |    |   |   |   |   |    |    |    |       |
|----|----|----|---|---|----|----|----|---|---|---|---|----|----|----|-------|
| a2 | a1 | a0 | 0 | 0 | n2 | n1 | n0 | 0 | 2 | = | ? | c2 | c1 | c0 | $C_R$ |
|----|----|----|---|---|----|----|----|---|---|---|---|----|----|----|-------|

**Control command**  -->  !

|    |    |    |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
|----|----|----|---|---|----|----|----|----|----|----|-----|----|----|----|----|-------|
| a2 | a1 | a0 | 1 | 0 | n2 | n1 | n0 | l1 | l0 | dn | ... | d0 | c2 | c1 | c0 | $C_R$ |
|----|----|----|---|---|----|----|----|----|----|----|-----|----|----|----|----|-------|

**Data response / Control command understood**  --> 

|    |    |    |   |   |    |    |    |    |    |    |     |    |    |    |    |       |
|----|----|----|---|---|----|----|----|----|----|----|-----|----|----|----|----|-------|
| a2 | a1 | a0 | 1 | 0 | n2 | n1 | n0 | l1 | l0 | dn | ... | d0 | c2 | c1 | c0 | $C_R$ |
|----|----|----|---|---|----|----|----|----|----|----|-----|----|----|----|----|-------|

**Error message**  --> 



|    |    |    |   |   |    |    |    |   |   |   |   |   |   |   |   |    |    |    |       |  |
|----|----|----|---|---|----|----|----|---|---|---|---|---|---|---|---|----|----|----|-------|--|
| a2 | a1 | a0 | 1 | 0 | n2 | n1 | n0 | 0 | 6 | N | O | _ | D | E | F | c2 | c1 | c0 | $C_R$ |  |
|    |    |    |   |   |    |    |    |   |   |   | _ | R | A | N | G | E  |    |    |       |  |
|    |    |    |   |   |    |    |    |   |   |   | _ | L | O | G | I | C  |    |    |       |  |

NO\_DEF            Parameter number n2–n0 no longer exists  
 \_RANGE            Data dn–d0 outside the permissible range  
 \_LOGIC            Logical access error

### 5.6.3 Telegram example 1

**Data query**

Current rotation speed (parameter **[P:309]**, device address slave: "123")

|   |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |       |
|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-------|
|  -->  ? | 1  | 2  | 3  | 0  | 0  | 3  | 0  | 9  | 0  | 2  | =  | ?  | 1  | 1  | 2  | $C_R$ |
| ASCII   | 49 | 50 | 51 | 48 | 48 | 51 | 48 | 57 | 48 | 50 | 61 | 63 | 49 | 49 | 50 | 13    |

**Data response: 633 Hz**

Current rotation speed (parameter **[P:309]**, device address Slave: "123")



|         |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |                |
|---------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----------------|
| ○ --> ☒ | 1  | 2  | 3  | 1  | 0  | 3  | 0  | 9  | 0  | 6  | 0  | 0  | 0  | 6  | 3  | 3  | 0  | 3  | 7  | C <sub>R</sub> |
| ASCII   | 49 | 50 | 51 | 49 | 48 | 51 | 48 | 57 | 48 | 54 | 48 | 48 | 48 | 54 | 51 | 51 | 48 | 51 | 55 | 13             |

### 5.6.4 Telegram example 2

#### Control command

Switch on the pumping station (parameter **[P:010]**, device address Slave: "042")

|          |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |                |
|----------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----------------|
| ☒ --> ○! | 0  | 4  | 2  | 1  | 0  | 0  | 1  | 0  | 0  | 6  | 1  | 1  | 1  | 1  | 1  | 1  | 0  | 2  | 0  | C <sub>R</sub> |
| ASCII    | 48 | 52 | 50 | 49 | 48 | 48 | 49 | 48 | 48 | 54 | 49 | 49 | 49 | 49 | 49 | 49 | 48 | 50 | 48 | 13             |

#### Control command understood

Switch on the pumping station (parameter **[P:010]**, device address Slave: "042")

|         |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |                |
|---------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----------------|
| ○ --> ☒ | 0  | 4  | 2  | 1  | 0  | 0  | 1  | 0  | 0  | 6  | 1  | 1  | 1  | 1  | 1  | 1  | 0  | 2  | 0  | C <sub>R</sub> |
| ASCII   | 48 | 52 | 50 | 49 | 48 | 48 | 49 | 48 | 48 | 54 | 49 | 49 | 49 | 49 | 49 | 49 | 48 | 50 | 48 | 13             |

### 5.6.5 Data types used

| Data type       | Description                | Length I1 – I0 | Example   |
|-----------------|----------------------------|----------------|---|
| 0 – boolean_old | logical value (false/true) | 06             | 000000 corresponds with false<br>111111 corresponds with true |
| 1 – u_integer   | pos. whole number          | 06             | 000000 to 999999  |
| 2 – u_real      | pos. fixed-point number    | 06             | 001571 corresponds with 15.71                                 |
| 4 – string      | Character string           | 06             | TC_400, TM_700  |
| 6 – boolean_new | logical value (false/true) | 01             | 0 corresponds with false<br>1 corresponds with true           |
| 7 – u_short_int | pos. whole number          | 03             | 000 to 999  |
| 10 – u_expo_new | pos. exponential value     | 06             | 100023 corresponds with $1.0 \cdot 10^3$                      |
| 11 – string     | Character string           | 16             | this-is-an-example  |

## 6 Operation

### 6.1 Putting the vacuum pump into operation

Important settings and function-related variables are factory-programmed into the vacuum pump electronic drive unit as parameters. Each parameter has a three-digit number and a description. Parameter-driven operation and control is supported via Pfeiffer Vacuum displays and control units, or externally via RS-485 using Pfeiffer Vacuum protocol.

**⚠ WARNING**

**Danger of poisoning due to toxic process media escaping from the exhaust pipe**

During operation with no exhaust line, the vacuum pump allows exhaust gases and vapors to escape freely into the air. There is a risk of injury and fatality due to poisoning in processes with toxic process media.

- ▶ Observe the pertinent regulations for handling toxic process media.
- ▶ Safely purge toxic process media via an exhaust line.
- ▶ Use appropriate filter equipment to separate toxic process media.

**NOTICE**

**Vacuum pump damage caused by overpressure**

Mixing up the connections causes overpressure overload. The vacuum pump can be started only against max. 1 bar differential pressure between inlet and outlet; otherwise the motor jams and sustains damage.

- ▶ Make sure that the distributor is installed correctly on the diaphragm heads, before connecting the vacuum pump to the vacuum equipment.
- ▶ Before commissioning, make completely sure that the pressure side pressure is below the permissible limit.

| Parameter | Name    | Designation                           | Adjustment, setting |
|-----------|---------|---------------------------------------|---------------------|
| [P:707]   | SpdSVal | Speed-control operation specification | 75 %                |

**Tbl. 7: Factory setting of the electronic drive unit for diaphragm pumps when delivered**

**Before switching on**

1. Compare the frequency specifications on the rating plate with the available supply voltage.
2. Adequately protect the vacuum pump from sucking in impurities through appropriate measures (e.g. dust filter).
3. Check the exhaust connection for free passage (max. permissible pressure: 1100 hPa absolute).
4. Actuate the shut-off units so that the shut-off units open before or at the same time as the pump starts up.

### 6.2 Operating modes

The following operating modes are possible:

- Operation without control unit
- Operation via an external control unit
- Operation via RS-485 and Pfeiffer Vacuum display and control unit or PC

**i**

**Automatic start**

After bypassing the contacts at pins 2, 7, 5 on the connecting plug or when using a connecting cable with respective bridges and applying the supply voltage, the vacuum pump starts up immediately.

Pfeiffer Vacuum therefore recommends switching on the voltage supply immediately before operation.

**Operation without control unit**

1. Connect the respective connecting cable with bridges to the connecting plug.
2. Provide the current supply for the power supply pack.
3. Switch on the power supply pack with switch S1.

After applying the operating voltage, the vacuum pump carries out a self-test to check the supply voltage. After a successfully completed self-test, the vacuum pump starts.

**Operation via an external control unit**

- ▶ Connect the remote control via the 15-pin D-Sub socket.

The control is carried out by means of "PLC level".

**Operation with the peripheral devices DCU or HPU**

1. Connect the respective peripheral device to the 15-pin D-Sub socket.
2. Switch on the power supply pack with switch S1 or on the peripheral device.
3. Make the desired settings via the RS-485 using the peripheral device.



Observe the following documents when operating with a Pfeiffer Vacuum display and control panel in the [DownloadCenter](#).

- Operating manual "DCU" (PT0250)
- Operating manual "HPU" (PT0101)

## 6.3 Switching on the vacuum pump

The vacuum pump can be switched on in each pressure range, between atmospheric pressure and ultimate pressure.

When pumping down dry gases, no special precautions are required.

### CAUTION

**Danger of burns on hot surfaces**

Depending on the operating and ambient conditions, the surface temperature of the vacuum pump can increase to above 70 °C.

- ▶ Provide suitable touch protection.

**Switching on the vacuum pump**

Once all necessary cable connections have been established, the following options are available for switching on the pump:

- using a mains switch on the power supply pack with respective bridges on the 15-pin D-Sub socket
  - via the peripheral devices DCU/HPU
  - using the PLC control unit on the 15-pin D-Sub socket
- ▶ Allow the vacuum pump to warm up prior to process start, with the vacuum flange closed.
    - The running warm time depends on the ambient temperature and may take between 15 and 30 minutes.

The vacuum pump achieves the specified throughput and ultimate pressure values once the operating temperature has been reached.

## 6.4 Operation with Pfeiffer Vacuum parameter set

### 6.4.1 General

All variables of the vacuum pump relevant for the function are stored as parameters in the electronic drive unit. Each parameter has a three-digit number and a description. Parameters can be used via Pfeiffer Vacuum display and control panels or via RS-485 with the Pfeiffer Vacuum protocol.

**Conventions**

Parameters are printed in bold as **three-digit numbers in square brackets**. The designation can also be specified.

Example: **[P:312] Software version**

### Factory settings

The electronic drive unit is pre-programmed in the factory. This makes a more direct and safe operation of the vacuum pump possible without additional configuration.

You can configure the following parameters for the specific process:

- **[P:026]**: rotation speed setting mode on/off.
- **[P:707]**: specification of the rotation speed setting mode with 25 to 134% of the nominal rotation speed.
- **[P:002]**: stand-by mode on/off.

## 6.4.2 Parameter overview



### Non-volatile data storage

When switching off or in the event of unintentional voltage drop, the **parameters** and the operating hours stay saved in the electronics.

|             |   |
|-------------|---|
| #           | Three digit number of the parameter   |
| Display     | Designation of the parameter  |
| Description | Brief description of the parameters   |
| Functions   | Function description of the parameters  |
| Data type   | Type of formatting of the parameter for the use with the Pfeiffer Vacuum protocol   |
| Access type | R (read): Read access; W (write): Write access  |
| Unit        | Physical unit of the described variable   |
| min. / max. | Permissible limit values for the entry of a value   |
| default     | Factory default pre-setting (partially pump-specific)   |
|             | The parameter can be stored as non-volatile in the electronic drive unit and can be used after switching the electric mains power supply back on. |

Tbl. 8: Explanation and meaning of the parameters

## 6.4.3 Control commands

| #   | Display     | Designations             | Functions  | Data type | Access type | Unit | min. | max. | de-fault | can be stored |
|-----|-------------|--------------------------|--|-----------|-------------|------|------|------|----------|---------------|
| 002 | Standby     | Standby                  | 0 = off<br>1 = on  | 0         | RW          |      | 0    | 1    | 0        | x             |
| 010 | Pumpg-Statn | Pump                     | 0 = off<br>1 = on  | 0         | RW          |      | 0    | 1    | 0        | x             |
| 019 | Cfg DO2     | Configuration output DO2 | 1 = No error<br>2 = Error<br>5 = Set rotation speed reached<br>6 = Pump on<br>9 = "0"<br>10 = "1"<br>11 = Remote priority active | 7         | RW          |      | 0    | 20   | 6        | x             |
| 024 | Cfg DO1     | Configuration output DO1 | Settings, see <b>[P:019]</b>   | 7         | RW          |      | 0    | 20   | 1        | x             |
| 026 | SpdSet-Mode | Speed actuator operation | 0 = off<br>1 = on  | 7         | RW          |      | 0    | 1    | 0        | x             |

| #   | Display    | Designations               | Functions   | Data type | Access type | Unit | min. | max. | default | can be stored |
|-----|------------|----------------------------|---|-----------|-------------|------|------|------|---------|---------------|
| 060 | CtrlVialnt | Operation of the interface | 1 = remote<br>2 = RS-485<br>4 = PV.can<br>32 = Keys on the front panel<br>255 = Interface selection | 7         | RW          |      | 1    | 255  | 1       | x             |
| 061 | IntSelLckd | Interface selection locked | 0 = off<br>1 = on   | 0         | RW          |      | 0    | 1    | 0       | x             |

Tbl. 9: Parameter set | Control commands

#### 6.4.4 Status requests

| #   | Display     | Description                              | Functions         | Data type | Access type | Unit | min. | max. | default | can be stored |
|-----|-------------|--|-------------------|-----------|-------------|------|------|------|---------|---------------|
| 303 | Error code  | Error code                               |                   | 4         | R           |      |      |      |         |               |
| 309 | ActualSpd   | Actual rotational speed (Hz)             |                   | 1         | R           | Hz   |      |      |         |               |
| 311 | OpHrsPump   | Pump operating hours                     |                   | 1         | R           | h    |      |      |         | x             |
| 312 | Fw version  | Software version interface circuit board |                   | 4         | R           |      |      |      |         |               |
| 313 | DrvVoltage  | Supply voltage                           | Voltage in x.xx V | 2         | R           | V    |      |      |         |               |
| 315 | Nominal Spd | Nominal rotational speed (Hz)            |                   | 1         | R           | Hz   |      |      |         |               |
| 316 | DrvPower    | Drive power                              | Output in xW      | 1         | R           | W    |      |      |         |               |
| 317 | MotCurrent  | Motor current                            |                   | 2         | R           | A    |      |      |         |               |
| 324 | TempPwrstg  | Temperature power electronics            |                   | 1         | R           | °C   |      |      |         |               |
| 349 | ElecName    | Device name designation                  |                   | 4         | R           |      |      |      |         |               |
| 352 | FWVERSDRV   | Firmware of the FC                       |                   | 4         | R           |      |      |      |         |               |
| 354 | HW Version  | Hardware version interface circuit board |                   | 4         | R           |      |      |      |         |               |
| 398 | ActualSpd   | Actual speed (rpm)                       |                   | 1         | R           | rpm  |      |      |         |               |
| 399 | NominalSpd  | Nominal rotation speed (rpm)             |                   | 1         | R           | rpm  |      |      |         |               |

Tbl. 10: Parameter set | Status requests

### 6.4.5 Reference value inputs

| #   | Display   | Designations                                   | Functions  | Data type | Access type | Unit | min. | max. | de-fault | can be stored |
|-----|-----------|--|--|-----------|-------------|------|------|------|----------|---------------|
| 707 | SpdSVal   | Setpoint in speed-control operation            | Set rotation speed in x.x% of the nominal rotation speed | 2         | RW          | %    | 25   | 170  | 75       | x             |
| 717 | StdbysVal | Rotational speed setpoint in standby operation |  | 2         | RW          | %    | 30   | 100  | 66.7     | x             |
| 797 | RS485Adr  | RS-485 Interface address                       |  | 1         | RW          |      | 1    | 255  | 1        | x             |

Tbl. 11: Parameter set | Reference value inputs

### 6.4.6 Configuring the connections with the PV parameter set

The electronic drive unit is pre-configured with the factory default basic functions and is ready for operation. For individual requirements, you can configure most connections for the electronic drive unit with the parameter set.

#### Configure the digital outputs

- Perform the configuration as per the following table:

| Option                         | Description                                    |
|--------------------------------|--|
| 1 = No error                   | active, with trouble-free operation            |
| 2 = Error                      | active, if the error message is active         |
| 5 = Set rotation speed reached | active, once the set rotation speed is reached |
| 6 = Pump on                    | active, if pump on, motor on and no error      |
| 9 = always 0                   | GND for the control of an external device      |
| 10 = always 1                  | V+ for the control of an external device       |
| 11 = Remote                    | active, if the remote priority is active       |

Tbl. 12: Configuration with parameters [P:019] and [P:024]

#### Configure the interface

- Perform the configuration as per the following table:

| Option [P:060]               | Description                                 |
|------------------------------|---|
| 1 = remote                   | Operation via connection "remote"           |
| 2 = RS-485                   | Operation via connection "RS-485"           |
| 4 = PV.can                   | For service purposes only                   |
| 32 = Keys on the front panel | Manual operation                            |
| Option [P:061]               |   |
| 0 = off                      | Interface selection can be set via [P:060]. |
| 1 = on                       | Interface selection locked                  |

Tbl. 13: Configuration with parameters [P:060] and [P:061]

### 6.4.7 Speed actuator operation

The set rotation speed is selected via the parameter **[P:707]** in the range **30 to 134%** of the set rotation speed. If the speed is higher than the set rotation speed (> 100%), an increased pump wear is possible. The rotation speed setting mode has priority over the stand-by mode.



#### Permissible rotation speed range of the vacuum pump

Parameterization in rotation speed setting mode is subject to the permissible rotation speed range of the respective vacuum pump. The electronic drive unit regulates automatically to the next valid value.

#### Set the rotation speed setting mode

1. Set the parameter **[P:707]** to the required value in %.
2. Set the parameter **[P:026]** to "1".
3. Check the set rotation speed (parameter **[P:308]** or **[P:397]**).

### 6.4.8 Standby mode

Pfeiffer Vacuum recommends standby mode for during process and production stops. With active stand-by mode, the electronic drive unit reduces the speed of the vacuum pump in the range of **30 to 100%** of the nominal speed. The factory setting is 66.7% of the nominal speed.

#### Setting the related parameters

1. Set the parameter **[P:717]** to the required value in %.
2. Set the parameter **[P:026]** to "0".
3. Set the parameter **[P:002]** to "1".
4. Check the set rotation speed (parameter **[P:308]** or **[P:397]**).

### 6.4.9 Normal operation

The vacuum pump starts in boost mode for max. 5 minutes with the maximum speed. The current is monitored at the same time. If the current is below a threshold value, the speed is controlled down to nominal rotation speed. In case the power input increases again, automatic increase of the speed does not take place. An increase in speed is reached again after vacuum pump stop / start.

#### Setting the related parameters



1. Set the parameter **[P:002]** to "0".
2. Set the parameter **[P:026]** to "0".
3. Check the set rotation speed (parameter **[P:308]**).

## 6.5 Operation monitoring

### 6.5.1 Operating mode display via LED

The LED on the electronic drive unit indicates the basic operating conditions. A differentiated malfunction and warning display is possible only for operation with DCU or HPU.

| Display | Activity          | Meaning   |
|---------|-------------------|---|
|         | None              | <ul style="list-style-type: none"> <li>• No adequate power supply</li> </ul>  |
|         | 10% active, 1 Hz  | <ul style="list-style-type: none"> <li>• No errors</li> <li>• Vacuum pump "OFF"</li> <li>• Vacuum pump stationary</li> </ul>        |
|         | 50 % active, 1 Hz | <ul style="list-style-type: none"> <li>• No errors</li> <li>• Vacuum pump "OFF"</li> <li>• Vacuum pump still rotating</li> </ul>    |
|         | 90 % active, 1 Hz | <ul style="list-style-type: none"> <li>• No errors</li> <li>• Vacuum pump "ON"</li> <li>• Set rotation speed not reached</li> </ul> |

| Display   | Activity           | Meaning   |
|---|--------------------|---|
|  | 100% active        | <ul style="list-style-type: none"> <li>• No errors</li> <li>• Vacuum pump "ON"</li> <li>• Target speed reached</li> </ul> |
|  | 50% active, 10, Hz | <ul style="list-style-type: none"> <li>• Defect</li> </ul>  |

Tbl. 14: Behavior and meaning of the LED of the electronic drive unit

### 6.5.2 Temperature monitoring

In event of impermissibly high pump temperature ( $> 75\text{ }^{\circ}\text{C}$ ), the motor speed is reduced to a nominal rotation speed ( $n_N = 1500\text{ min}^{-1}$ ) in order to avoid the vacuum pump from overheating.

After cooling down ( $< 72\text{ }^{\circ}\text{C}$ ), the vacuum pump starts to run at set rotation speed.

## 6.6 Switching off the vacuum pump

### Procedure

You can switch off the vacuum pump in any pressure range.

1. Allow the vacuum pump to run on for a few more minutes with the intake port open.
2. Disconnect the voltage supply on the power supply pack.



## 7 Maintenance

### 7.1 Maintenance instructions

#### **WARNING**

##### **Health hazard through poisoning from toxic contaminated components or devices**

Toxic process media result in contamination of devices or parts of them. During maintenance work, there is a risk to health from contact with these poisonous substances. Illegal disposal of toxic substances causes environmental damage.

- ▶ Take suitable safety precautions and prevent health hazards or environmental pollution by toxic process media.
- ▶ Decontaminate affected parts before carrying out maintenance work.
- ▶ Wear protective equipment.

#### **CAUTION**

##### **Danger of injury from moving parts**

After a power failure or a standstill as a result of overheating, the motor restarts automatically. There is a risk of injury to fingers and hands if they enter the operating range of rotating parts.

- ▶ Safely disconnect motor from the mains.
- ▶ Secure the motor against reactivation.
- ▶ Dismantle the vacuum pump for inspection, away from the system if necessary.

#### **NOTICE**

##### **Danger of property damage from improper maintenance**

Unprofessional work on the vacuum pump will lead to damage for which Pfeiffer Vacuum accepts no liability.

- ▶ We recommend taking advantage of our service training offering.
- ▶ When ordering spare parts, specify the information on the nameplate.

The following section describes the tasks for cleaning and maintaining the vacuum pump.

#### **Servicing the vacuum pump**

1. Switch off the vacuum pump.
2. Allow the vacuum pump to cool if needed.
3. Vent the vacuum pump to atmospheric pressure via the intake side.
4. Disconnect the vacuum pump from the voltage supply.
5. Secure the motor against reactivation.
6. If you are carrying out maintenance work, disassemble the pump only to the extent necessary.
7. Do not use alcohol or other cleaning agents to clean the diaphragms and valves; use only a dry cloth.

### 7.2 Checklist for inspection and maintenance

Pfeiffer Vacuum recommends that all maintenance work is carried out by the manufacturer's service department. If the required intervals listed below are exceeded, or if maintenance work is carried out improperly, no warranty or liability claims are accepted on the part of Pfeiffer Vacuum. This also applies if original spare parts are not used.

| Action                           | Inspection |  | Maintenance level 2                             | Required material |
|----------------------------------|------------|--|---|-------------------|
|                                  | Interval   |  |   |                   |
|                                  | daily      | as required;<br>at least once every six months | as required;<br>after 15000 hours at the latest |                   |
| Check silencer for contamination |            | ■  |   |                   |
| Clean the vacuum pump            |            |  | ■   | Overhaul kit      |
| Change the valves and diaphragms |            |  |   |                   |
| Change silencer                  |            |  | ■   |                   |

Depending on the operating conditions, the required maintenance intervals can be shorter than the reference values specified in the table. Please consult Pfeiffer Vacuum if necessary.

Valves and diaphragms are wear parts. At the latest when the reached pressure values decrease, the suction chamber, the diaphragms as well as the valves should be cleaned and checked for cracks.

You can find the corresponding spare parts in the chapter Spare parts.

**Tbl. 15: Maintenance intervals for diaphragm pumps**


### 7.3 Replace the diaphragms and valves

#### NOTICE

**Property damage from incorrect installation**

Changed dead volume from incorrect installation of the original spacer disks worsens the final vacuum or leads to bearing damage.

- ▶ During disassembly, keep the existing spacer disks separate per installation location.
- ▶ Reinstall the original spacer disks back in-between the supporting washer and connection rod.

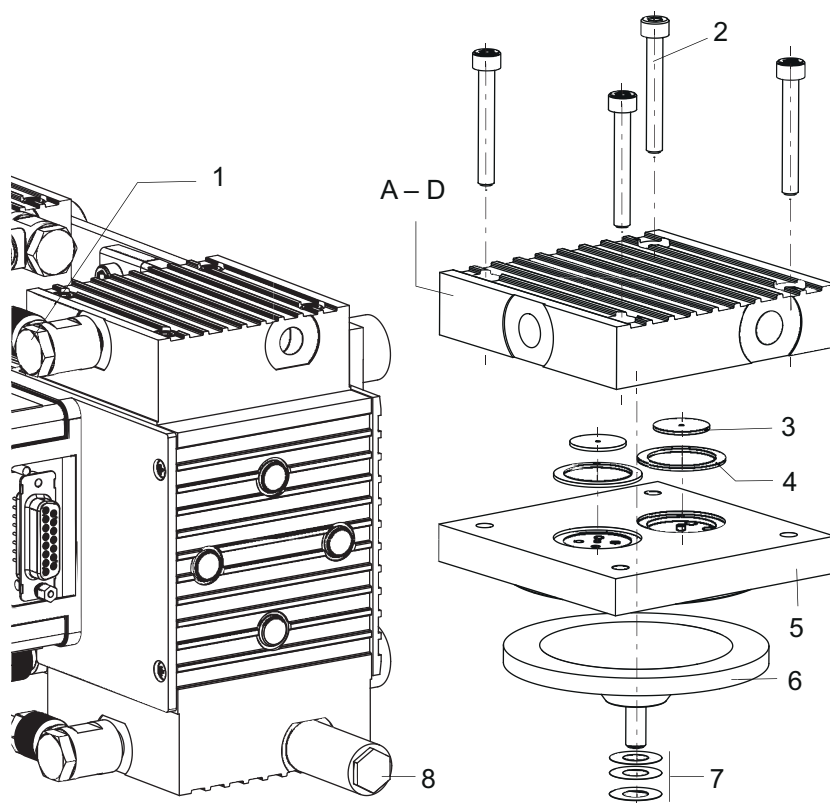

**Fig. 11: Replacing the diaphragms and valves on the MVP 015-4**

|       |   |   |                    |
|-------|---|---|--------------------|
| A – D | Diaphragm heads                         | 5 | Intermediate plate |
| 1     | Banjo bolt                              | 6 | Diaphragms         |
| 2     | Cylinder screws                         | 7 | Spacer disks       |
| 3     | Valves                                  | 8 | Silencer           |
| 4     | Sealing ring (only on diaphragm head A) |   |                    |

#### Required tools

- Allen key, 4 mm
- Open-end wrench, 14 mm

#### Dismantling the diaphragm head

1. Switch off the vacuum pump.
2. Allow the vacuum pump to cool down.
3. Vent the vacuum pump to atmospheric pressure via the intake side.
4. Disconnect the banjo bolts on the diaphragm heads.
5. Dismantle the hose connections.
6. Rotate the vacuum pump so that the diaphragm head is facing upwards.
7. Unscrew and remove the cylinder screws on the diaphragm head.
8. Remove the intermediate plate.
9. Remove the valves and sealing rings from the intermediate plate.
10. Gently lift the diaphragm at the edge and swivel the diaphragm out of the connection rod (right-hand thread).
11. Pay attention to the spacer disks.

#### Installing the diaphragm head

1. Clean the head cover and the valve seats in the intermediate plate using alcohol.
2. Check all parts for wear.
3. Clean the valves and diaphragms using just a dry cloth – do not use any alcohol or other cleaning agents.
4. Check the bypass bore hole in the intermediate plate of diaphragm head A.
5. Replace the wear parts according to the spare parts pack.
6. Install the diaphragm head.

## 8 Decommissioning

### 8.1 Decommissioning the vacuum pump for longer periods

Observe the following notes before shutting down the vacuum pump for a longer period of time:

#### Brief procedure after condensate forming

1. Allow the vacuum pump to run on for a few more minutes with the vacuum connection open.
2. In case media has entered the vacuum pump that may attack the pump materials or lead to deposits, clean the inside of the diaphragm heads.

#### Procedure for shutting down for longer periods

1. Disconnect the vacuum pump from the vacuum system.
2. Remove the vacuum pump from the vacuum system if necessary.
3. Close the vacuum and exhaust flanges with the original screw caps.
4. Store the vacuum pump only in dry, dust-free rooms, within the specified ambient conditions.
5. In rooms with humid or aggressive atmospheres: Hermetically seal the vacuum pump together with a drying agent in a plastic bag.

### 8.2 Disposing of the vacuum pump

#### **WARNING**

##### **Health hazard through poisoning from toxic contaminated components or devices**

Toxic process media result in contamination of devices or parts of them. During maintenance work, there is a risk to health from contact with these poisonous substances. Illegal disposal of toxic substances causes environmental damage.

- ▶ Take suitable safety precautions and prevent health hazards or environmental pollution by toxic process media.
- ▶ Decontaminate affected parts before carrying out maintenance work.
- ▶ Wear protective equipment.

#### **Procedure**

- ▶ Dispose of all substances safely according to local regulations.

## 9 Errors

### ⚠ CAUTION

#### Danger of burns on hot surfaces

In the event of a fault, the surface temperature of the vacuum pump can increase to above 105°C.

- ▶ Allow the vacuum pump to cool down before working on it.
- ▶ Wear personal protective equipment if necessary.

### NOTICE

#### Danger of property damage from improper maintenance

Unprofessional work on the vacuum pump will lead to damage for which Pfeiffer Vacuum accepts no liability.

- ▶ We recommend taking advantage of our service training offering.
- ▶ When ordering spare parts, specify the information on the nameplate.

Should malfunctions occur, you can find information about potential causes and how to fix them here:

| Problem  | Possible causes  | Remedy  |
|--|--|---|
| Vacuum pump will not start up                              | <ul style="list-style-type: none"> <li>• No supply voltage or voltage does not correspond to the motor data</li> </ul> | <ul style="list-style-type: none"> <li>• Check the supply voltage.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>• Pump temperature too low</li> </ul>   | <ul style="list-style-type: none"> <li>• Heat the vacuum pump to a temperature of &gt; 5°C.</li> </ul>                              |
|  | <ul style="list-style-type: none"> <li>• Thermal protection of the motor has triggered</li> </ul>                      | <ul style="list-style-type: none"> <li>• Identify and eliminate the cause and allow vacuum pump to cool if necessary.</li> </ul>    |
|  | <ul style="list-style-type: none"> <li>• Diaphragms or valves dirty</li> </ul>   | <ul style="list-style-type: none"> <li>• Clean the vacuum pump.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>• Overpressure in the exhaust lead</li> </ul>                                   | <ul style="list-style-type: none"> <li>• If required, check and clean the exhaust line.</li> </ul>                                  |
| Vacuum pump switches off after a while after being started | <ul style="list-style-type: none"> <li>• Thermal protection of the motor has triggered</li> </ul>                      | <ul style="list-style-type: none"> <li>• Identify and eliminate the cause and allow vacuum pump to cool if necessary.</li> </ul>    |
|  | <ul style="list-style-type: none"> <li>• Exhaust pressure too high</li> </ul>  | <ul style="list-style-type: none"> <li>• Check exhaust line outlet opening and exhaust side accessories.</li> </ul>                 |
| Vacuum pump does not reach the specified ultimate pressure | <ul style="list-style-type: none"> <li>• Condensate in the vacuum pump</li> </ul>                                      | <ul style="list-style-type: none"> <li>• Operate the vacuum pump at atmospheric pressure for a longer period.</li> </ul>            |
|  | <ul style="list-style-type: none"> <li>• Soiled valves or diaphragms</li> </ul>  | <ul style="list-style-type: none"> <li>• If necessary, clean or replace the valves and diaphragms.</li> </ul>                       |
|  | <ul style="list-style-type: none"> <li>• Leak in system</li> </ul>   | <ul style="list-style-type: none"> <li>• Locate and eliminate the leak.</li> </ul>  |
| Pumping speed of vacuum pump too low                       | <ul style="list-style-type: none"> <li>• The intake line is not suitably dimensioned</li> </ul>                        | <ul style="list-style-type: none"> <li>• Make sure that connections are short and cross sections adequately dimensioned.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>• Exhaust pressure too high</li> </ul>  | <ul style="list-style-type: none"> <li>• Check exhaust line outlet opening and exhaust side accessories.</li> </ul>                 |

| Problem                         | Possible causes   | Remedy  |
|---------------------------------|---|---|
| Unusual noises during operation | <ul style="list-style-type: none"> <li>• Defective valves or diaphragms</li> </ul>            | <ul style="list-style-type: none"> <li>• If necessary, clean or replace the valves and diaphragms.</li> </ul> |
|                                 | <ul style="list-style-type: none"> <li>• Soiled suction chamber</li> </ul>                    | <ul style="list-style-type: none"> <li>• Clean suction chamber.</li> </ul>                                    |
|                                 | <ul style="list-style-type: none"> <li>• The silencer is loose or missing</li> </ul>          | <ul style="list-style-type: none"> <li>• If necessary, check or replace the silencer.</li> </ul>              |
|                                 | <ul style="list-style-type: none"> <li>• Valves dirty or defective</li> </ul>                 | <ul style="list-style-type: none"> <li>• If necessary, clean or replace the valves and diaphragms.</li> </ul> |
|                                 | <ul style="list-style-type: none"> <li>• Connection rod or motor bearing defective</li> </ul> | <ul style="list-style-type: none"> <li>• Contact <a href="#">Pfeiffer Vacuum Service</a>.</li> </ul>          |

**Tbl. 16: Troubleshooting on diaphragm pumps**

## 10 Service solutions from Pfeiffer Vacuum

### We offer first class service

Long vacuum component service life, coupled with low downtimes, are clear expectations that you have of us. We satisfy your needs with capable products and outstanding service.

We are consistently striving to perfect our core competence, service for vacuum components. And our service is far from over once you've purchased a product from Pfeiffer Vacuum. It often enough really just begins then. In proven Pfeiffer Vacuum quality, of course.

Our professional sales engineers and service technicians stand ready to provide hands-on support to you worldwide. Pfeiffer Vacuum offers a complete portfolio of service offerings, ranging from genuine spare parts right through to service agreements.

### Take advantage of Pfeiffer Vacuum Service

Whether for preventative on-site service from our field service, fast replacement with as-new replacement products or repair in a Service Center close to you; you have various options for upholding your equipment availability. Detailed information and addresses can be found on our website in the Pfeiffer Vacuum Service section.

### Advice on the optimum solution is available from your Pfeiffer Vacuum contact partner.

**For quick and smooth handling of the service process, we recommend the following steps:**



1. Download the current form templates.
  - Declaration of Service Request
  - Service Request
  - Declaration of Contamination

- a. Dismantle all accessories and keep them (all external mounted parts as valve, inlet screen, etc.).
- b. Drain the operating fluid/lubricant as necessary.
- c. Drain the cooling medium as necessary.



2. Fill out the service request and the declaration of contamination.



3. Send the forms via email, fax or post to your local Service Center.




4. You will receive a response from Pfeiffer Vacuum.


PFEIFFER VACUUM

### Sending of contaminated products


No units will be accepted if they are contaminated with micro-biological, explosive or radioactive substances. If products are contaminated or if the declaration of contamination is missing, Pfeiffer Vacuum will contact the customer before starting maintenance. In addition, depending on the product and the level of contamination **additional decontamination costs** may be required.

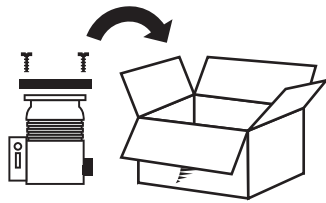

5. Prepare the product for transport in accordance with the details in the declaration of contamination.
  - a) Neutralize the product with nitrogen or dry air.
  - b) Close all openings with airtight blank flanges.
  - c) Seal the product in appropriate protective film.
  - d) Only pack the product in suitable, stable transport containers.
  - e) Observe the applicable transport conditions.
6. Affix the declaration of contamination to the **outside** of the packaging.

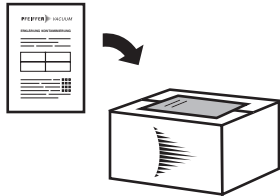

7. Then send your product to your local [Service Center](#).

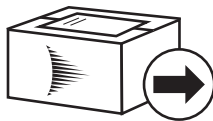

8. You will receive a confirmation message/a quotation from Pfeiffer Vacuum.



PFEIFFER VACUUM

For all service orders, our [General Terms and Conditions of Sales and Supply](#) and [General Terms and Conditions of Repair and Maintenance](#) apply to vacuum equipment and components.




# 11 Spare parts

## 11.1 Ordering spare parts packs

Observe the following instructions when ordering spare parts:

- ▶ Have the vacuum pump part number to hand, along with other details from the rating plate if necessary.
- ▶ Only use original spare parts.
- ▶ When preparing the overhaul kit, observe the respective item number of the diaphragm pump.
  - Depending on the overhaul kit, the membrane contour is different and matches the respective intermediate plate on the diaphragm pump.

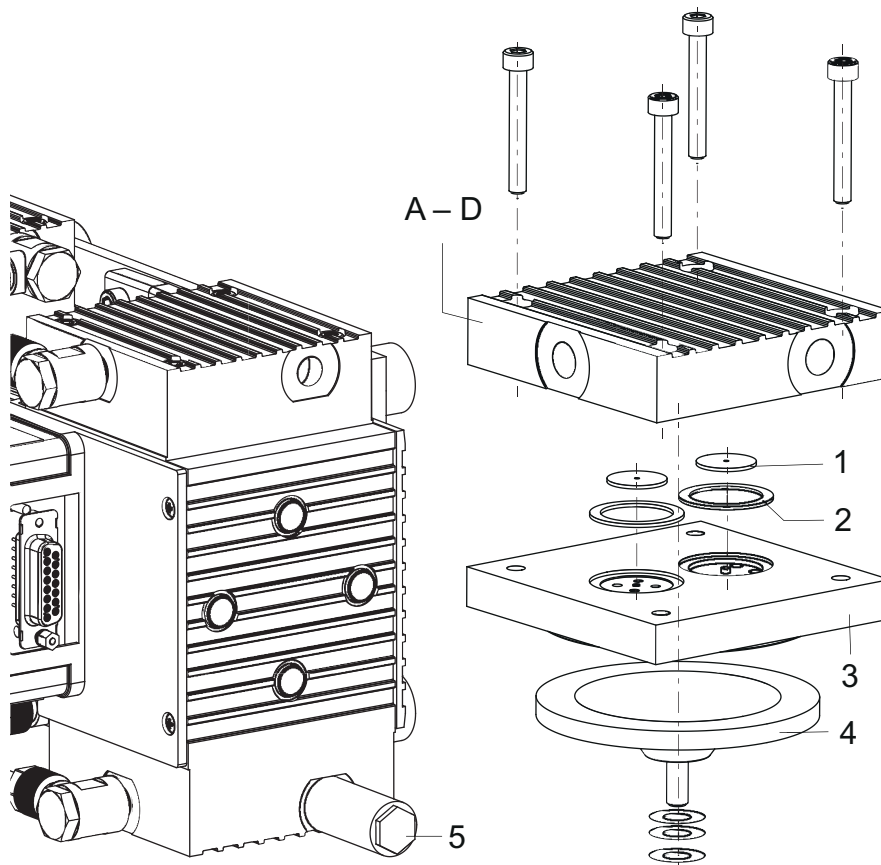

**Fig. 12: Spare parts for the MVP 015-4 DC**

|       |              |   |                    |
|-------|--------------|---|--------------------|
| A – D | Head cover   | 3 | Intermediate plate |
| 1     | Valve        | 4 | Diaphragm          |
| 2     | Sealing ring |   |                    |

| Item no. of the diaphragm pump | PK T05 068, PK T05 069<br>(Invalid versions) | PK T05 160, PK T05 161<br>(Current versions) | comprising the following parts |
|--------------------------------|--|--|--------------------------------|
| Spare parts pack               | Order no.                                    | Order no.                                    |                                |
| Head cover                     | PU E22 024 -T                                | PU E22 024 -T                                | A – D (4x)                     |
| Overhaul kit                   | PU E22 009 -T                                | PU E22 031 -T                                | 1, 2, 4 (complete)             |
| Silencer                       | P 0920 567 E                                 | P 0920 567 E                                 | 5                              |
| Interhead connection           | PK 050 272 -T                                | PK 050 272 -T                                | complete (3x)                  |

**Tbl. 17: Spare parts packs for the MVP 015-4 DC**

## 12 Accessories

| <b>Accessories for MVP 015-4 DC</b>  | <b>order number</b> |
|--|---------------------|
| Hose Connection DN 6 x 400 mm with G 1/8" and G 1/4" Straight Fitting      | P 0920 739 E        |
| Hose Connection DN 6 x 1000 mm with G 1/8" and G 1/4" Straight Fitting     | P 0920 817 E        |
| Hose DN 6; (ø 8/6 mm)  | P 0991 939          |
| Push-In Fitting G 1/8" including Seal                                      | P 4131 029 G        |
| Push-In T-Fitting G 1/8"   | P 4131 030 E        |
| Mains Cable, 230 V AC, CEE 7/7 to C13                                      | P 4564 309 ZA       |
| Mains Cable, 115 V AC, NEMA 5-15 to C13                                    | P 4564 309 ZE       |
| Mains Cable, 115/230 V, without plug, socket (straight)                    | P 4564 309 ZH       |
| Y-Connector M12  | P 4723 010          |
| Connection Cable MVP-TC-TPS  | PE 100 013 -T       |
| Screw-In Flange DN 16 ISO-KF / G 1/8" incl. Seal                           | PK 050 108 -T       |
| HPU 001, Handheld Programming Unit   | PM 051 510 -T       |
| RJ 45 Interface Cable on M12   | PM 051 726 -T       |
| Accessories Package for HPU  | PM 061 005 -T       |
| USB Converter to RS-485 Interface  | PM 061 207 -T       |
| Interface Cable, M12 m Straight/M12 m Straight                             | PM 061 283 -T       |
| TPS 180, power supply pack for wall/standard rail fitting                  | PM 061 341 -T       |
| Mains Cable, 230 V AC, CEE 7/7 to C13                                      | P 4564 309 ZA       |
| Mains Cable, 115 V AC, NEMA 5-15 to C13                                    | P 4564 309 ZE       |
| Mains Cable, 208 V AC, NEMA 6-15 to C13                                    | P 4564 309 ZF       |
| Wall Rail Fitting for TPS 110/180/310/400                                  | PM 061 392 -T       |
| TPS 181, power supply pack 19" rack module 3HU                             | PM 061 345 -T       |
| Front Panel Kit for TPS 181  | PM 061 394 -T       |
| DCU 002, Display Control Unit  | PM 061 348 -T       |
| RJ 45 Interface Cable on M12   | PM 051 726 -T       |
| Connection Cable with RS-485 Interface for TC 110/120 to power supply pack | PM 061 350 -T       |
| Connection Cable for HiPace®   | PM 061 543 -T       |
| DCU 180, Display Control Unit  | PM C01 821          |

**Tbl. 18: MVP 015-4 DC accessories**

## 13 Technical data and dimensions

### 13.1 General

Basis for the technical data of Pfeiffer Vacuum diaphragm pumps:

- Specifications according to PNEUROP committee PN5
- ISO 21360:2012: "Vacuum technology - Standard methods for measuring vacuum-pump performance - General description"

The following harmonized standards are fulfilled:

- IEC 61010-1
- UL 61010-1
- CSA 61010-1

|              | mbar | bar                  | Pa             | hPa  | kPa               | Torr   mm Hg        |
|--------------|------|----------------------|----------------|------|-------------------|---------------------|
| mbar         | 1    | $1 \cdot 10^{-3}$    | 100            | 1    | 0.1               | 0.75                |
| bar          | 1000 | 1                    | $1 \cdot 10^5$ | 1000 | 100               | 750                 |
| Pa           | 0.01 | $1 \cdot 10^{-5}$    | 1              | 0.01 | $1 \cdot 10^{-3}$ | $7.5 \cdot 10^{-3}$ |
| hPa          | 1    | $1 \cdot 10^{-3}$    | 100            | 1    | 0.1               | 0.75                |
| kPa          | 10   | 0.01                 | 1000           | 10   | 1                 | 7.5                 |
| Torr   mm Hg | 1.33 | $1.33 \cdot 10^{-3}$ | 133.32         | 1.33 | 0.133             | 1                   |

$$1 \text{ Pa} = 1 \text{ N/m}^2$$

**Tbl. 19: Conversion table: Pressure units**

|                        | mbar l/s             | Pa m <sup>3</sup> /s | sccm | Torr l/s             | atm cm <sup>3</sup> /s |
|------------------------|----------------------|----------------------|------|----------------------|------------------------|
| mbar l/s               | 1                    | 0.1                  | 59.2 | 0.75                 | 0.987                  |
| Pa m <sup>3</sup> /s   | 10                   | 1                    | 592  | 7.5                  | 9.87                   |
| sccm                   | $1.69 \cdot 10^{-2}$ | $1.69 \cdot 10^{-3}$ | 1    | $1.27 \cdot 10^{-2}$ | $1.67 \cdot 10^{-2}$   |
| Torr l/s               | 1.33                 | 0.133                | 78.9 | 1                    | 1.32                   |
| atm cm <sup>3</sup> /s | 1.01                 | 0.101                | 59.8 | 0.76                 | 1                      |

**Tbl. 20: Conversion table: Units for gas throughput**

### 13.2 Technical data

| Classification                        | MVP 015-4 DC                           | MVP 015-4 DC                           |
|---------------------------------------|--|--|
| Order number                          | PK T05 160                             | PK T05 161                             |
| Flange (in)                           | G 1/8"                                 | G 1/8"                                 |
| Flange (out)                          | G 1/8" with silencer                   | G 1/8" with silencer                   |
| Pumping speed, max.                   | 0.75 m <sup>3</sup> /h                 | 0.75 m <sup>3</sup> /h                 |
| Ultimate pressure without gas ballast | $\leq 5 \cdot 10^{-1}$ hPa             | $\leq 5 \cdot 10^{-1}$ hPa             |
| Intake pressure max.                  | 1100 hPa                               | 1100 hPa                               |
| Exhaust pressure, max.                | 1100 hPa                               | 1100 hPa                               |
| Leak rate                             | $5 \cdot 10^{-4}$ Pa m <sup>3</sup> /s | $5 \cdot 10^{-4}$ Pa m <sup>3</sup> /s |
| Operating voltage: DC                 | 24 V                                   | 24 V                                   |
| Input voltage: tolerance              | ±10 %                                  | ±10 %                                  |
| Rated current absorption              | 3.3 A                                  | 3.3 A                                  |

| Classification   | MVP 015-4 DC      | MVP 015-4 DC      |
|--|-------------------|-------------------|
| Current max.   | 6.8 A             | 6.8 A             |
| Short circuit current of power supply, max.                | 45 A              | 45 A              |
| Rotation speed   | 540 – 1 800 rpm   | 540 – 1 800 rpm   |
| Emission sound pressure level without gas ballast or purge | ≤ 45 dB(A)        | ≤ 45 dB(A)        |
| Cooling method, standard                                   | Convection cooled | Convection cooled |
| Operating altitude, max.                                   | 2000 m            | 2000 m            |
| Protection category  | IP20              | IP20              |
| Ambient temperature  | 5 – 40 °C         | 5 – 40 °C         |
| Temperature: Storage                                       | 5 – 40 °C         | 5 – 40 °C         |
| Weight   | 4.4 kg            | 4.1 kg            |
| I/O interfaces   | RS-485            | RS-485            |
| Switch New   | No                | No                |
| Mains cable included                                       | No                | No                |
| Mains cable  | No                | No                |

Tbl. 21: Technical data MVP 015-4 DC

### 13.3 Substances in contact with the media

| MVP 015-2 DC                                       | Substances in contact with the media |
|--|--------------------------------------|
| Diaphragm  | EPDM                                 |
| Valves   | EPDM                                 |
| Head cover   | Aluminium                            |
| Hose connection                                    | PVC                                  |
| Elbow union  | Aluminium                            |
| Straight compression coupling on the intake flange | CuZn nickel-plated                   |
| Suction hose                                       | Polyethylene                         |
| Exhaust, silencer                                  | Polyamide                            |

Tbl. 22: Materials that touch the process media inside the diaphragm pump

### 13.4 Dimensions

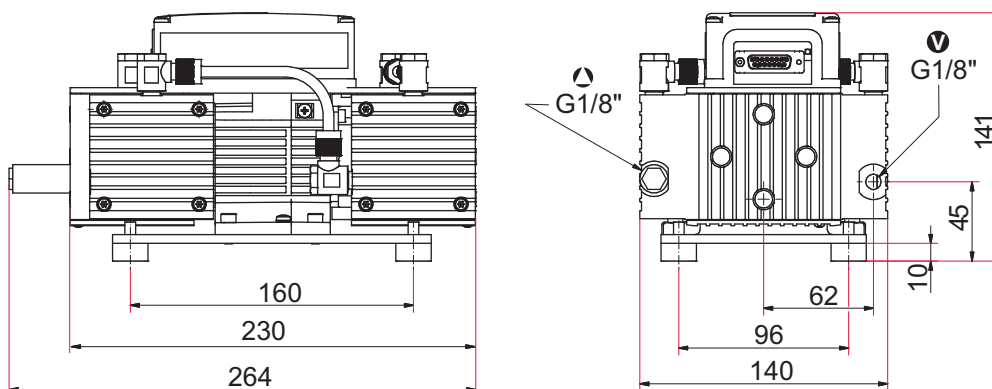


Fig. 13: Dimension diagram of MVP 015-4 DC | standard design

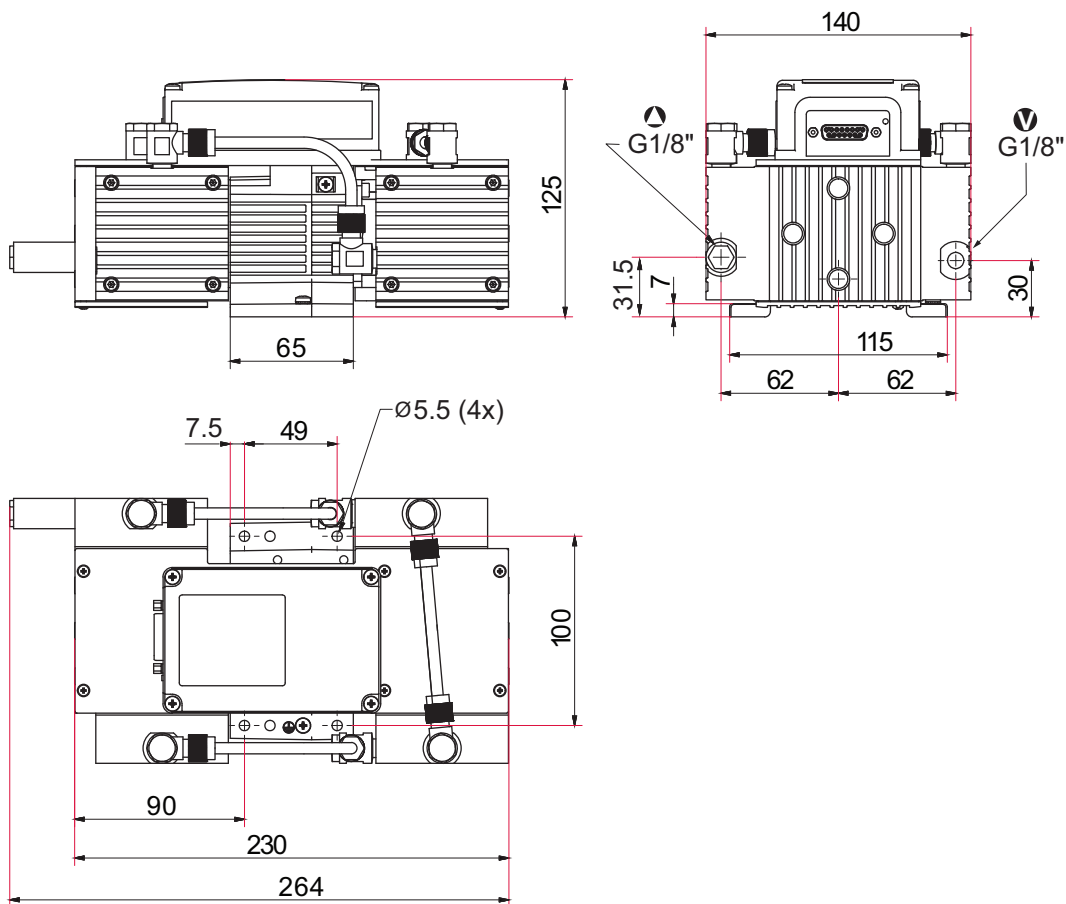


Fig. 14: Dimension diagram of MVP 015-4 DC | pumping station design



# Declaration of conformity

We hereby declare that the product cited below satisfies all relevant provisions of the following EC Directives:

**Machinery 2006/42/EC (Annex II, no. 1 A)**

**Electromagnetic compatibility 2014/30/EU**

**Restriction of the use of certain hazardous substances 2011/65/EU**

The authorized representative for the compilation of technical documents is Mr. Sebastian Oberbeck, Pfeiffer Vacuum GmbH, Berliner Straße 43, 35614 Asslar, Germany.

**MVP 015-4 DC**

**Harmonized standards and applied national standards and specifications:**

EN ISO 12100: 2010

DIN EN 55011: 2009 + A1: 2010

EN 1012-2: 2011-12

EN 61000-3-2: 2013

EN 61010-1: 2010

EN 61000-3-3: 2013

EN 61326-1: 2013-07

---

Signature:

Pfeiffer Vacuum GmbH  
Berliner Straße 43  
35614 Asslar  
Germany

---

(Dr. Ulrich von Hülsen)  
President

2018-03-16



## VACUUM SOLUTIONS FROM A SINGLE SOURCE

Pfeiffer Vacuum stands for innovative and custom vacuum solutions worldwide, technological perfection, competent advice and reliable service.

## COMPLETE RANGE OF PRODUCTS

From a single component to complex systems:

We are the only supplier of vacuum technology that provides a complete product portfolio.

## COMPETENCE IN THEORY AND PRACTICE

Benefit from our know-how and our portfolio of training opportunities!

We support you with your plant layout and provide first-class on-site service worldwide.

ed. A - Date 1903 - P/N:PU0078BEN



Are you looking for a  
perfect vacuum solution?  
Please contact us

Pfeiffer Vacuum GmbH  
Headquarters • Germany  
T +49 6441 802-0  
info@pfeiffer-vacuum.de

[www.pfeiffer-vacuum.com](http://www.pfeiffer-vacuum.com)

**PFEIFFER**  **VACUUM**